

## Heater assembly for Color and Day/ Night domes

Thank you for choosing the heater assembly for the 3-Axis Vandal resistant domes. Before attempting to connect or operate this product, please read and follow these instructions.


### General

This heater assembly is designed to provide heat to the new 3-Axis Vandal resistant domes. The manual is designed to assist in the fitting of the heater assembly.


### Contents of Package

1. Heater PCB
2. Heater
3. Extension cable (for Type 4 only)
4. User manual
5. Screw

### Installation

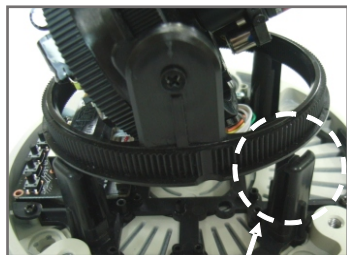


1.Remove support bracket

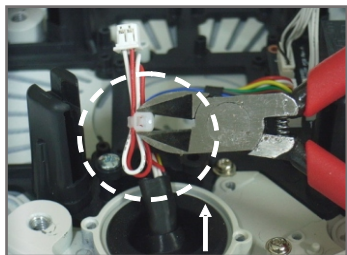

2. Remove cable tie of the heater power cable  
(Type 1, Type 2 and Type 3 only)


### 3. Install the Heater PCB kit

<TYPE-1>

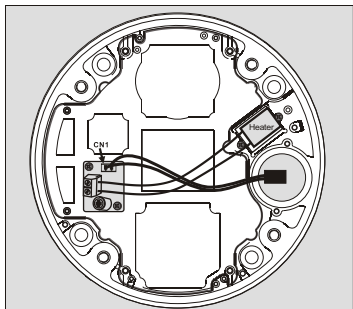


Insert heater power connector to heater PCB(CN1).  
Attach the adhesive end of the heater to the housing.

<TYPE-2>

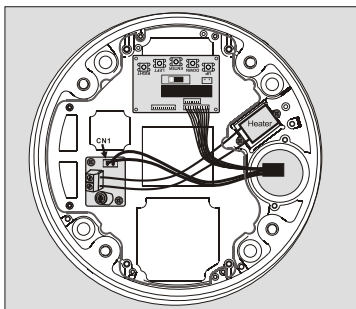


Insert heater power connector to heater PCB(CN1).  
Attach the adhesive end of the heater to the housing.

<TYPE-3>

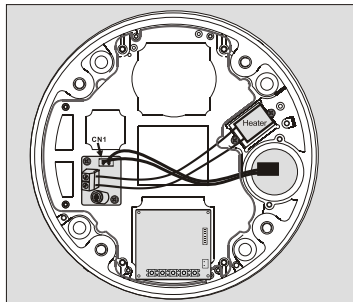

Insert heater power connector to heater PCB(CN1).  
Attach the adhesive end of the heater to the housing.

<TYPE-4>

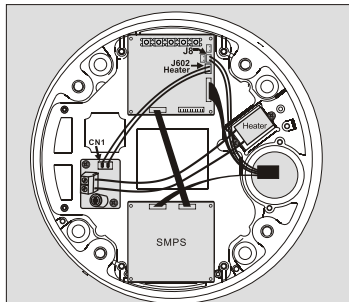

Insert heater extension cable to connect  
heater PCB(CN1) to control PCB(J602 Heater).  
Attach the adhesive end of the heater to the housing.

### Specification

Power source	Power supply 24VAC /12VDC
Power consumption	Power consumption 20W Max
Operating Temperature	Heater ON : at 41°F (5°C)
	Heater OFF : at 59°F (15°C)