## Replacing a RJ-11 model camera with a new non-RJ-11 camera using existing RJ-11 cable.











Typical w/RJ-11 Connection

RJ-11 Cable (Various lengths)

**CONKIT Power Supply** 

## Replace with BNC connector Camera













Using the A-RJ2BNCST adapter Supply

Existing RJ-11 Cable

Another A-RJ2BNCST and New Power











Typical dome camera

use the A-RJ2BNCST adapter RJ-11 Cable

Connect to multi-channel Power Supply

A 12VDC or 24VAC power supply can be used with all dual voltage cameras that do not have heaters installed.

Bullet cameras with model numbers with a "P" include a 12VDC power supply