


DIGITAL VIDEO RECORDER 4-CHANNEL MODEL USER'S MANUAL

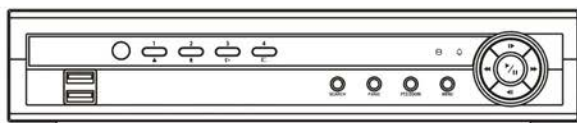



WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

COMPLIANCE NOTICE OF FCC:

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.


WARNING: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

The information in this manual is believed to be accurate as of the date of publication. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the complete corresponding source code from us. See the Open Source Guide on the software CD (*OpenSourceGuide\OpenSourceGuide.pdf*) or as a printed document included along with the User's Manual.

Important Safeguards

<p>1. Read Instructions All the safety and operating instructions should be read before the appliance is operated.</p> <p>2. Retain Instructions The safety and operating instructions should be retained for future reference.</p> <p>3. Cleaning Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.</p> <p>4. Attachments Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.</p> <p>5. Water and/or Moisture Do not use this equipment near water or in contact with water.</p> <p>6. Placement and Accessories Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment.</p>  <p>This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.</p> <p>Do not place this equipment on a closed space. Sufficient amount of ventilation air is necessary to avoid increase of ambient temperature which can cause improper operation or the risk of fire.</p> <p>7. Power Sources This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company.</p> <p>8. Power Cords Operator or installer must remove power and TNT connections before handling the equipment.</p> <p>9. Lightning For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.</p>	<p>10. Overloading Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.</p> <p>11. Objects and Liquids Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.</p> <p>12. Servicing Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.</p> <p>13. Damage requiring Service Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions: A. When the power-supply cord or the plug has been damaged. B. If liquid is spilled, or objects have fallen into the equipment. C. If the equipment has been exposed to rain or water. D. If the equipment does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation. E. If the equipment has been dropped, or the cabinet damaged. F. When the equipment exhibits a distinct change in performance – this indicates a need for service.</p> <p>14. Replacement Parts When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.</p> <p>15. Safety Check Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.</p> <p>16. Field Installation This installation should be made by a qualified service person and should conform to all local codes.</p> <p>17. Correct Batteries Warning: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.</p> <p>18. Tmra A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.</p>
--	---

WEEE (Waste Electrical & Electronic Equipment)

Correct Disposal of This Product
(Applicable in the European Union and other European countries with separate collection systems)



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Table of Contents

Chapter 1 — Introduction	1
Features	1
Technical Overview	1
Chapter 2 — Installation	3
Package Contents	3
Required Installation Tools	3
Video Input	3
Video Loop Through	4
Audio In/Out	4
Factory Reset Switch	4
Video Out	4
Network Port	5
Alarm Input/Output	5
RS485 Port	5
RS232 Port	6
Power Cord Connector	6
Chapter 3 — Configuration	7
Front Panel Controls	7
Camera Buttons (1 to 4)	7
HDD LED	8
Alarm LED	8
Arrow Buttons	8
Play/Pause Button	8
Menu Button	8
PTZ/Zoom Button	8
Panic Button	9
Search Button	9
USB Port	9
Remote Control Buttons	9
ID Button	10
Camera Buttons	10
Sequence Button	10
Freeze Button	10
Arrow Buttons	10
Menu Button	10
Playback Buttons	10
Panic Button	11
Layout Button	11
Zoom Button	11
PTZ Button	11
Enter Button	11
Alarm Button	11

PTZ Control Buttons	11
Back Up Button	11
Calendar Button	11
Turning on the Power	12
Initial Unit Setup	12
Setup Screen	13
System Setup	13
Information	13
Date/Time	16
Storage	17
User	18
Wizard	20
Shutdown	24
Network Setup	24
Network	24
Notification	29
Devices Setup	31
Camera	31
Audio	32
Alarm-Out	33
Display	33
Recording Setup	35
Record	35
Schedule	37
Pre-Event	38
Event Setup	39
Alarm-In	39
Motion Detection	40
Video Loss	43
System Event	44
Event Status	46
Chapter 4 — Operation	47
Turning on the Power	47
Live Monitoring	47
Live Monitoring Menu	48
Zoom Mode	49
PTZ Mode	49
Using a Mouse	50
Recording Video	51
Recording Audio	52
Playing Recorded Video	52
Searching Video	53
Search Menu	53
Event Log Search	55
Calendar Search	57

Clip-Copy.....	57
Appendix	61
USB Hard Disk Drive Preparation	61
Preparing the USB hard disk drive in Windows 2000.....	61
Preparing the USB hard disk drive in Windows 98.....	61
Time Overlap.....	62
WebGuard.....	62
Web Monitoring Mode	64
Web Search Mode.....	65
Troubleshooting.....	67
System Log Notices	68
Error Code Notices	68
Map of Screens	69
Specifications	70

List of Illustrations

Figure 1 — Typical DVR installation.....	2
Figure 2 — DVR rear panel.....	3
Figure 3 — DVR front panel.....	7
Figure 4 — Infrared remote control.....	9
Figure 5 — Login screen.....	12
Figure 6 — Logout screen.....	12
Figure 7 — Setup screen.....	13
Figure 8 — System menu.....	13
Figure 9 — Information setup screen.....	14
Figure 10 — Date/Time setup screen.....	16
Figure 11 — Holiday setup screen.....	17
Figure 12 — Storage Information setup screen.....	17
Figure 13 — Storage Status setup screen.....	18
Figure 14 — User setup screen.....	19
Figure 15 — Setup Wizard screen.....	20
Figure 16 — Quick Setup Wizard screen.....	21
Figure 17 — Network Setup Wizard screen.....	22
Figure 18 — Shutdown screen.....	24
Figure 19 — Network menu.....	24
Figure 20 — Network setup screen.....	24
Figure 21 — LAN (Manual) setup screen.....	26
Figure 22 — DVRNS setup screen.....	27
Figure 23 — RTSP setup screen.....	28
Figure 24 — WebGuard setup screen.....	29
Figure 25 — Notification Callback setup screen.....	29
Figure 26 — Notification Mail setup screen.....	30
Figure 27 — Devices menu.....	31
Figure 28 — Camera setup screen.....	31

Figure 29 — Camera PTZ setup screen.	32
Figure 30 — Audio setup screen.	33
Figure 31 — Alarm-Out Settings setup screen.	33
Figure 32 — Display OSD setup screen.	34
Figure 33 — Main Monitor setup screen.	35
Figure 34 — VGA setup screen.	35
Figure 35 — Record menu.	35
Figure 36 — Record setup screen.	36
Figure 37 — Panic Record setup screen.	37
Figure 38 — Schedule setup screen.	37
Figure 39 — Pre-Event setup screen.	39
Figure 40 — Event menu.	39
Figure 41 — Alarm-In Settings setup screen.	39
Figure 42 — Alarm-In Actions setup screen.	40
Figure 43 — Motion Detection Settings setup screen.	41
Figure 44 — Motion Detection Actions setup screen.	42
Figure 45 — Video Loss Settings setup screen.	43
Figure 46 — Video Loss Actions setup screen.	43
Figure 47 — Health Check setup screen.	44
Figure 48 — Storage setup screen.	45
Figure 49 — System Event Actions setup screen.	45
Figure 50 — Event Status setup screen.	46
Figure 51 — Live Monitoring menu.	47
Figure 52 — PTZ Select Camera menu.	49
Figure 53 — PTZ Preset screen.	50
Figure 54 — Mouse Display menu.	51
Figure 55 — Search menu.	53
Figure 56 — Event Log Search screen.	55
Figure 57 — Calendar Search.	57
Figure 58 — Clip-Copy screen.	58

Chapter 1 — Introduction

Features

Your color digital video recorder (DVR) provides recording capabilities for four camera inputs. It provides exceptional picture quality in both live and playback modes, and offers the following features:

- 4 Composite Video Input Connectors
- Compatible with Color (NTSC or PAL) and B&W (CCIR and EIA-170) Video Sources
- Auto Detection for NTSC and PAL
- Monitor Connectors: 1 BNC Video Out, 1 VGA
- H.264 Codec
- Multiple Search Engines (Date/Time, Calendar, Event)
- Real-time Recording (120/100 Images per Second (NTSC/PAL) with High (2CIF) Resolution)
- “Loop-Through” Video Connectors
- Continuous Recording in Disk Overwrite Mode
- 2 USB 2.0 Ports
- Continues Recording while Transmitting to Remote Site and during Playback
- User-friendly Graphical User Interface (GUI) Menu System
- Multiple Recording Modes (Time-lapse, Pre-event, Event and Panic)
- Quick Setup Wizard
- Two-way Audio Communication
- Audio Recording and Playback
- Alarm Connections Include: Input and Output
- Built-in Alarm Buzzer
- Live or Recorded Video Access via Ethernet
- Self-diagnostics with automatic notification including hard disk drive S.M.A.R.T. protocol
- Infrared Remote Control

Technical Overview

In addition to replacing both a time-lapse VCR and a multiplexer in a security installation, your DVR has many features that make it much more powerful and easier to use than even the most advanced VCR.

The DVR converts analog NTSC or PAL video to digital images and records them on a hard disk drive. Using a hard disk drive allows you to access recorded video almost instantaneously; there is no need to rewind tape. The technology also allows you to view recorded video while the DVR continues recording video.

Digitally recorded video has several advantages over analog video recorded on tape. There is no need to adjust tracking. You can freeze frames, fast forward, fast reverse, slow forward and slow reverse without image streaking or tearing. Digital video can be indexed by time or events, and you can instantly view video after selecting the time or event.

Your DVR can be set up for event or time-lapse recording. You can define times to record, and the schedule can change for different days of the week and user defined holidays.

The DVR can be set up to alert you when the hard disk drive is full, or it can be set to record over the oldest video once the disk is full.

Your DVR uses a proprietary encryption scheme making it nearly impossible to alter video.

You can view video and control your DVR remotely by connecting via Ethernet. There is a USB port that can be used to upgrade the system or copy video clips to external hard disk and flash drives.

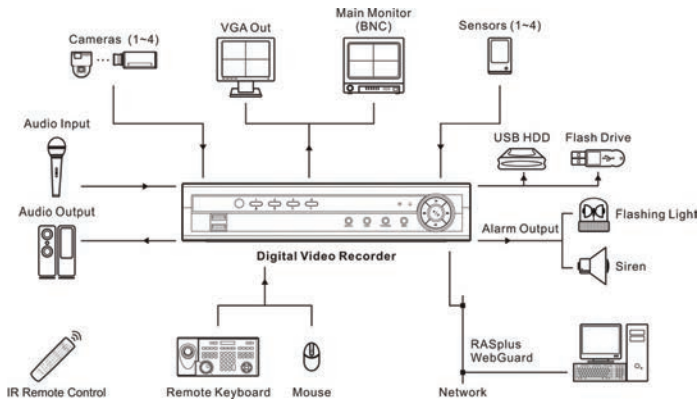


Figure 1 — Typical DVR installation.

Chapter 2 — Installation

Package Contents

The package contains the following:

- Digital Video Recorder
- Power Adaptor and Power Cord
- User's Manual (This Document)
- RAS Software CD and User's Manual
- USB Mouse
- Infrared Remote Control

Required Installation Tools

No special tools are required to install the DVR. Refer to the installation manuals for the other items that make up part of your system.

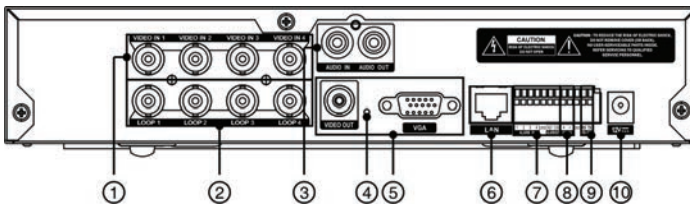


Figure 2 — DVR rear panel.

- | | | |
|------------------------|----------------------|----------------|
| ① Video Input | ② Video Loop Through | ③ Audio In/Out |
| ④ Factory Reset Switch | ⑤ Video Out | ⑥ Network Port |
| ⑦ Alarm Input/Output | ⑧ RS485 Port | ⑨ RS232 Port |
| ⑩ Power Cord Connector | | |

Your DVR can be used with either NTSC or PAL equipment.

NOTE: You cannot mix NTSC and PAL equipment. For example you cannot use a PAL camera and an NTSC monitor.

Video Input



Connect the coaxial cables from the video sources to the BNC Video In connectors.

Video Loop Through



If you would like to connect your video source to another device, you can use the Loop BNC connectors.

NOTE: The Loop BNC connectors are auto terminated. Do NOT connect a cable to the Loop BNC unless it is connected to a terminated device because it will cause poor quality video.

Audio In/Out



Your DVR can record audio. Connect the audio source to Audio In using an RCA jack. Connect Audio Out to your amplifier.

NOTE: It is the user's responsibility to determine if local laws and regulations permit recording audio.

NOTE: The DVR does not have amplified audio output, so you will need a speaker with an amplifier. The DVR does not have a pre-amplifier for audio input, so the audio input should be from an amplified source, not directly from a microphone.

Factory Reset Switch



The DVR has a Factory Reset switch to the left of the VGA port on the rear panel. This switch will only be used on the rare occasions that you want to return all the settings to the original factory settings.

CAUTION: When using the *Factory Reset*, you will lose any settings you have saved.

To reset the unit, you will need a straightened paperclip:

1. Turn the DVR off.
2. Poke the straightened paperclip into the unlabeled hole to the left of the VGA port, and turn the DVR on.
3. Hold the reset switch until the DVR turns on and live monitoring screen appears.
4. Release the reset switch. All of the DVR's settings are now at the original settings it had when it left the factory.

Video Out



Connect the main monitor to the Video Out connector.



A VGA connector is provided so that you can use a standard, multi-sync computer monitor as your main monitor. Use the cable supplied with your monitor to connect it to the DVR.

NOTE: The *Video Out* (BNC) and VGA connectors may be connected to individual monitors for simultaneous operation.


Network Port



The DVR can be networked using the 10/100Mb Ethernet connector. Connect a Cat5 cable with an RJ-45 jack to the DVR connector. The DVR can be networked with a computer for remote monitoring, searching, configuration and software upgrades. See *Chapter 3 — Configuration* for configuring the Ethernet connections.

CAUTION: The network connector is not designed to be connected directly with cable or wire intended for outdoor use.

Alarm Input/Output

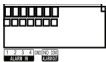

NOTE: To make connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below the button. After releasing the button, tug gently on the wire to make certain it is connected. To disconnect a wire, press and hold the button above the wire and pull out the wire.

Alarm In 1 to 4 (Alarm-In): You can use external devices to signal the DVR to react to events. Mechanical or electrical switches can be wired to the AI (Alarm-In) and GND (Ground) connectors. The threshold voltage for NC (Normally Closed) is above 4.3V and for NO (Normally Open) is below 0.3V, and it should be stable at least 0.5 seconds to be detected. See *Chapter 3 — Configuration* for configuring alarm input.

GND (Ground): Connect the ground side of the Alarm input and/or alarm output to the GND connector.

NOTE: All the connectors marked GND are common.

NO (Normally Open): Connect the device to the COM and NO (Normally Open) connector. NO is a relay output which sinks 1A@30VDC.

Connector Pin Outs:

Alarm In (1 to 4)	Alarm Inputs 1 to 4
GND	Chassis Ground
COM	Common
NO	Alarm Out (Normally Open)

RS485 Port



The RS485 connector can be used to control PTZ (pan, tilt, zoom) cameras. Connect RX+/TX+ and RX-/TX- of the control system to the + and – (respectively) of the DVR. See *Chapter 3 — Configuration* and the PTZ camera’s manual for configuring the RS485 connection.

Connector Pin Outs:

Master Unit		Slave Unit	
+	→ To	→	TX+/RX+
–	→ To	→	TX-/RX-
GND	→ To	→	GND

RS232 Port



PTZ cameras can be connected to the RS232 port. See *Chapter 3 — Configuration* and the PTZ camera manufacturer's manual for configuring the RS232 connection.

Connector Pin Outs:

Master Unit			Slave Unit	
RX	→	To	→	TXD
TX	→	To	→	RXD
GND	→	To	→	GND

NOTE: Refer to the following for pin-out details for the 9-pin connector of the slave unit.



Male



Female

Pin 2	RXD (Receive Data)
Pin 3	TXD (Transmit Data)
Pin 5	GND (Ground)

Power Cord Connector



Connect the connector from the adaptor to the DVR, and connect the AC power cord to the adaptor and then to the wall outlet.

WARNING: ROUTE POWER CORDS SO THAT THEY ARE NOT A TRIPPING HAZARD. MAKE CERTAIN THE POWER CORD WILL NOT BE PINCHED OR ABRADED BY FURNITURE. DO NOT INSTALL POWER CORDS UNDER RUGS OR CARPET.

THE POWER CORD HAS A GROUNDING PIN. IF YOUR POWER OUTLET DOES NOT HAVE A GROUNDING PIN RECEPTACLE, DO NOT MODIFY THE PLUG. DO NOT OVERLOAD THE CIRCUIT BY PLUGGING TOO MANY DEVICES IN TO ONE CIRCUIT.

CAUTION: Ensure the DVR is not near any heat source that could cause overheating.

CAUTION: The DVR does not have an internal fan so leave a clearance of at least 6 inches near ventilation hole areas on each side panel of the unit for proper ventilation.

Your DVR is now ready to operate. Refer to *Chapter 3 — Configuration* and *Chapter 4 — Operation*.

Chapter 3 – Configuration

NOTE: Your DVR should be completely installed before proceeding. Refer to *Chapter 2 – Installation*.

Front Panel Controls

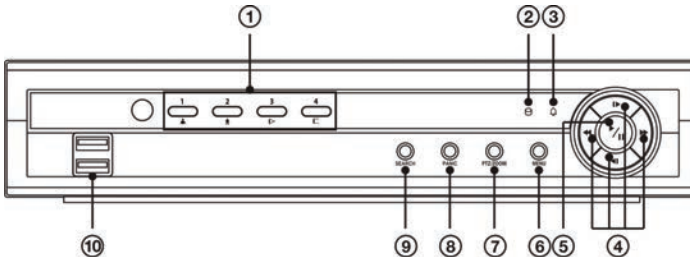


Figure 3 — DVR front panel.

- | | | | |
|---------------------|---------------|-------------------|-----------------|
| ① Camera Buttons | ② HDD LED | ③ Alarm Out LED | ④ Arrow Buttons |
| ⑤ Play/Pause Button | ⑥ Menu Button | ⑦ PTZ/Zoom Button | ⑧ Panic Button |
| ⑨ Search Button | ⑩ USB Port | | |

The front panel looks and operates much like a VCR combined with a multiplexer. Many of the buttons have multiple functions. The buttons on the infrared remote control, while laid out differently, perform the same functions as those on the front panel. The following describes each button and control. Take a few minutes to review the descriptions. You will use these to initially set up your DVR and for daily operations.

NOTE: A separate Alarm button is not provided. Pressing any button on the front panel or remote control resets alarm output including the internal buzzer when the alarm is activated. However, when you are in the menu or PTZ mode, you have to exit the menu or PTZ mode first to reset alarm output.

NOTE: The infrared sensor is just to the left of the **CAMERA 1** button. Make certain that nothing blocks the sensor, or the remote control will not function properly.

NOTE: You can also use a USB mouse to navigate through the screens and menus much like you would on a computer.

Camera Buttons (1 to 4)

Pressing the individual camera buttons will cause the selected camera to display full screen, and pressing the button again changes the display format to the quad (2x2) mode. Buttons 1 to 4 are also used to enter passwords.

In the PTZ mode, pressing the button 1 zooms in the screen and the button 2 zooms out the screen, and pressing the button 3 focuses near and button 4 focuses far.

HDD LED

The HDD LED flickers when the DVR is recording or searching video on the hard disk drive.


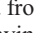
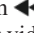

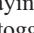
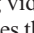
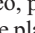



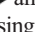
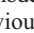
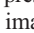
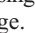


Alarm LED

The Alarm LED is lit when alarm output or internal buzzer is activated.


Arrow Buttons


These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the Up and Down arrow buttons to increase or decrease the number's value.

These buttons are also used to control Pan and Tilt when in the PTZ mode.


In the playback mode, pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and , and the screen displays ,  and  respectively. While playing video, pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and , and the screen displays ,  and  respectively. When in the pause mode, pressing the  button moves to the next image and pressing the  button moves to the previous image.


Play/Pause Button

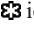In the live monitoring mode, pressing the  button freezes the current screen and the screen displays  icon. When in the playback mode, pressing the  button pauses playing video.



Pressing the  button selects a highlighted item or completes an entry that you have made during system setup.



Menu Button

In the Live Monitoring mode and Search mode, pressing the  button displays the menu icons at the top of the screen. Pressing the button again hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.

When in the live mode, pressing and holding the  button for three seconds or longer displays live channels sequentially.

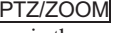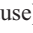PTZ/Zoom Button

In the live monitoring mode, pressing the  button enters the zoom mode, and pressing the button again exits the zoom mode. When in the zoom mode, a rectangle displays on the screen. A rectangle shows the area that will be enlarged. You can move the rectangle around using the arrow buttons. Pressing the  (Play/Pause) button enlarges the area in rectangle.

In the live monitoring mode, pressing and holding the  button for three seconds or longer enters the PTZ mode, and pressing and holding the button again for three seconds or longer exits the PTZ mode. When in the PTZ mode, pressing the arrow buttons or  button allows you to control properly configured cameras.

Panic Button

Pressing the **PANIC** button starts panic recoding of all camera channels, and displays **!** on the screen. Pressing the button again will stop panic recording.

Search Button

Pressing the **SEARCH** button enters the search mode, and pressing the button again exits the search mode. When entering the search mode, video is paused. Pressing the **⏮** (Play/Pause) button plays back video at regular speed. The screen displays **||** when the DVR is in the Pause mode and the screen displays **▶** when the DVR is playing back video. The button is also used to load a Preset View in the PTZ mode.

USB Port

A USB port on the front panel is provided to connect external hard disk or flash drives for video clip copying or system upgrades. Position external drives close enough to the DVR so that you can make the cable connections, usually less than 6 feet. Use the USB cable provided with the hard disk drive to connect it to the DVR.

A USB mouse can be connected to the USB port. You can use the mouse to navigate through the screens and menus much like you would on a computer.

Remote Control Buttons

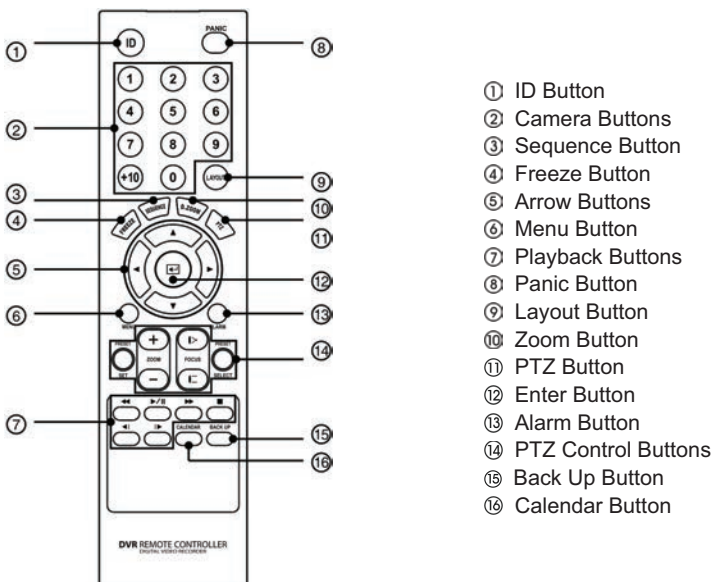



Figure 4 — Infrared remote control.


ID Button

If a DVR System ID is set to 0, the infrared remote control will control that DVR without any additional operations. (Refer to the *System Information* setup screen in this chapter for further information on setting the System ID.) If the system ID is 1 to 16, you must press the  button and then press the number button (1 to 16 (+10 & 6)) in order to control that DVR. If the System ID of two or more DVRs is set to 0, those DVRs will react to the infrared remote control at the same time.

Camera Buttons

Pressing the individual camera buttons will cause the selected camera to display full screen. Buttons 1 to 4 are also used to enter passwords.

Sequence Button

When in the Live Monitoring mode, pressing the  button displays live channels sequentially.

Freeze Button


Pressing the  button freezes the current live screen.

Arrow Buttons












These buttons are used to navigate through menus and GUI. You can also use them to change numbers by highlighting a number in the menu and using the **Up** and **Down** arrow buttons to increase or decrease the number's value. These buttons are also used to control Pan and Tilt when in the PTZ mode.




Pressing the **Left** and **Right** buttons moves through screen pages in the Live Monitoring mode and Search mode.

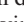Menu Button

In the Live Monitoring mode and Search mode, pressing the  button displays the menu icons at the top of the screen. Pressing the button also hides the menu icons. During menu setup, pressing the button closes the current menu or setup dialog box.



Playback Buttons

- **Rewind:** Pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and .
- **Play/Pause:** Pressing the  button plays back video at regular speed. The screen displays  when the DVR is in the Pause mode and the screen displays  when the DVR is playing back video.
- **Fast Forward:** Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and .

- **Stop:** Pressing the  button stops playback and enters the Live Monitoring mode.
- **Backward:** When in the pause mode, pressing the  button moves to the previous image.
- **Forward:** When in the pause mode, pressing the  button moves to the next image.

In the Live Monitoring mode, pressing any playback button enters to the Search mode.

Panic Button

Pressing the  button starts panic recoding of all camera channels, and displays  on the screen. Pressing the button again will stop panic recording.

Layout Button

Pressing the  button toggles between full screen and quad (2x2) screen modes.


Zoom Button

Pressing the  button zooms the current image on the screen. A PIP with a rectangle temporarily displays showing what area of the screen has been enlarged. You can use the arrow buttons to move the rectangle to another area.

PTZ Button

Pressing the  button enters the PTZ (Pan/Tilt/Zoom) mode which allows you to control properly configured cameras.




Enter Button

The  (Enter) button selects a highlighted item or completes an entry that you have made during system setup.

Alarm Button

Pressing the  button resets the DVR's outputs including the internal buzzer during an alarm.

PTZ Control Buttons

While in the PTZ mode, the  buttons are used to save Presets and load a Preset View, the  buttons are used to Zoom In and Zoom Out, and the  buttons are used for Near Focus and Far Focus.

Back Up Button

Pressing the  button allows you to copy video clips.

Calendar Button






In the search mode, pressing the  button displays the Calendar Search screen.


Turning on the Power

Connecting the power cord to the DVR turns on the unit. The unit takes approximately 60 seconds to initialize.

Initial Unit Setup

Before using your DVR for the first time, you will want to establish the initial settings. This includes items such as time and date, display language, camera, audio, record mode, network and password. Your DVR can be set up using various screens and dialog boxes.

Throughout the screens you will see . Highlighting the  and pressing the  (Play/Pause) button gives you the opportunity to reset that screen to its default settings. After you are finished with any setup screen, you can highlight **Save** and press the  button to save the changes and exit the screen. If you do not wish to save the changes, highlight **Cancel** and press the  button to exit the screen.

Press the **MENU** button or move the mouse pointer to the top of the screen and then select  (Login) in the Live Monitoring menu to enter the setup screens. The Login screen appears.

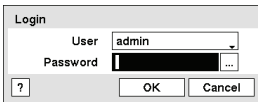






Figure 5 — Login screen.

Select a User and enter the password by pressing the appropriate combination of Camera number buttons and then the  button.

There is no default password when logging in the admin user for the first time. If you do not know the password, click the  button for guidance.

NOTE: To assure the secure management of the system, setting up a password is strongly recommended.

NOTE: If you cannot use the front panel buttons, click the  button using the mouse to enter a password, and the virtual keyboard displays. See instructions below for using the virtual keyboard.

NOTE: To log the user out of the system, press the **MENU** button on the front panel or move the mouse pointer to the top of the screen and then select  (Logout) in the Live Monitoring menu. The Logout screen displays asking you to confirm whether or not you want to log out the current user.

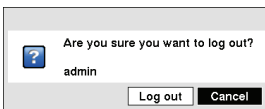


Figure 6 — Logout screen.

Setup Screen

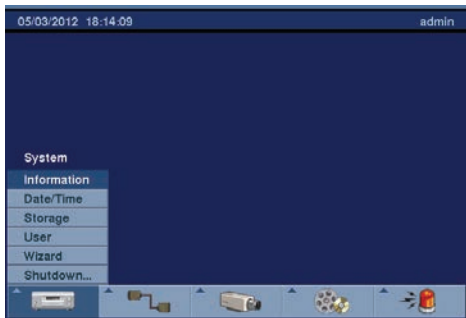


Figure 7 — Setup screen.

Press the **MENU** button on the front panel or move the mouse pointer to the top of the screen and then select (Setup) in the Live Monitoring menu to enter the setup screen.

While setting up the DVR, there will be many opportunities to enter names and titles. When making these entries, a Virtual Keyboard will appear.



Use the arrow keys to highlight the character you want in the name or title and press the button. That character appears in the title bar and the cursor moves to the next position. Pressing toggles between the upper and lower case keyboards, backspaces, and deletes entered characters. You can use up to 31 characters including spaces in your title.

System Setup

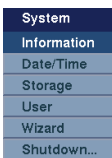


Figure 8 — System menu.

Information

Highlight **Information** in the System menu and press the button. The **Information** setup screen appears.

Figure 9 — Information setup screen.

Highlight the box beside System ID and press the button. Change the number by highlighting it and using the Up and Down arrow buttons to increase and decrease the number from 0 to 99.

NOTE: The System ID number is used to identify the unit when it is connected with other DVRs through the RS485 port. You cannot use the same ID number for two or more DVRs that are in the same RS485 network. It is possible to have multiple DVRs with System ID 0 that are in the same area as long as they are not part of an RS485 network. If this is the case, all will be controlled at the same time when using the infrared remote control.

Highlight the box beside Language and press button. A drop-down menu displays the available languages. Highlight the desired language and press the button.

The box beside Version displays the software version of the DVR.

To upgrade the software, connect a USB device containing the upgrade package file to the DVR. Highlight Upgrade... and press the button. The Upgrade screen appears.

The screen displays the upgrade package file names that are available. The “.rui” indicates that the file is for software upgrades. Select the desired file and press the button.

Highlighting the Install button and pressing the button will install the selected software package. Highlighting the Cancel button and pressing the button will close the window without upgrading the software. If the upgrade package file is not installed on the DVR properly, you will get an error message.

CAUTION: The system restarts automatically after completing the upgrade, and it takes approximately one minute to restart. Do NOT remove the USB device until the DVR restarts, otherwise the system upgrade will not be completed properly.

CAUTION: The USB device must be FAT16 or FAT32 format.




Setup Import

Select a setup file.

File name:

☐ Include Network Setup

You can import saved DVR settings or export the current DVR settings. To import saved DVR settings, connect the USB device containing the setup file (.dat) to the DVR. Highlight Setup – Import... and press the  button.


Select the desired setup file and press the Import button to import the selected settings and change the DVR settings accordingly. Highlight Include Network Setup and press the  button to toggle between On and Off. When set to Off, the network settings will not be changed.



Setup Export

File name:


To export the current DVR settings, connect the USB device to the DVR. Highlight Setup – Export... and press the  button.

Highlight the box beside File name and press the  button. A virtual keyboard allows you to enter the file name. Selecting Export will save the current settings in .dat file format on the USB device.


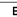


NOTE: Even after changing the DVR settings by importing saved settings, the time-related settings (Date/Time, Time Zone and Daylight Saving Time) will NOT be changed.

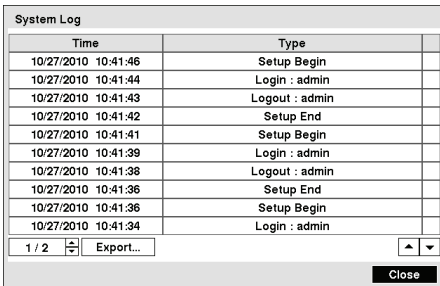

CAUTION: The USB device must be FAT16 or FAT32 format.


Highlight Show System Log... and press the  button to display the System Log.



Time	Type
10/27/2010 10:41:46	Setup Begin
10/27/2010 10:41:44	Login : admin
10/27/2010 10:41:43	Logout : admin
10/27/2010 10:41:42	Setup End
10/27/2010 10:41:41	Setup Begin
10/27/2010 10:41:39	Login : admin
10/27/2010 10:41:38	Logout : admin
10/27/2010 10:41:36	Setup End
10/27/2010 10:41:36	Setup Begin
10/27/2010 10:41:34	Login : admin


1 / 2   Export...  


The System Log screen lists system activities (up to 5,000 from the latest) that have occurred along with the time and date. The  icon will be displayed in the last column for system activities of the remote site. You can scroll through the log pages by using the Up and Down arrows, or you can go directly to a log page by entering the log page number in the box at the bottom left of the screen. Highlight Close and press the  button to exit the screen.

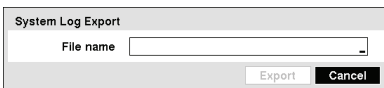

System Log Export


File name:

To export the system log information, connect the USB device to the DVR. Highlight Export... and press the  button.


Highlight the box beside File name and press the  button. A virtual keyboard allows you to enter the file name. Selecting Export will save the log information in .txt file format on the USB device.

NOTE: When opening the saved .txt file, setting to the proper character encoding and using fixed width fonts will be required to read the file properly.

The box beside Recorded Data – From / To displays the time information of recorded data.

Highlighting **Clear All Data...** and pressing the  button will clear all video data. You will be asked to verify that you wish to clear all data before the DVR erases the video data. **Clear All Data...** will not clear the System Log.

Date/Time

Highlight **Date/Time** in the System menu and press the  button. The **Date/Time** setup screen appears.



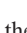





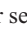
The screenshot shows the 'Date/Time' setup screen. At the top, there are two tabs: 'Date/Time' (selected) and 'Holiday'. Below the tabs, there are three main sections. The first section is for 'Date', with a box showing '11/08/2011' and a 'Format' dropdown menu. The second section is for 'Time', with a box showing '09:09:08' and a 'Format' dropdown menu. The third section is for 'Time Zone', with a dropdown menu showing 'GMT-05:00 Eastern Time (US & Canada)' and a checked checkbox for 'Enable Daylight Saving Time'. Below these sections is a world map. At the bottom right, there are 'Save' and 'Cancel' buttons.


Figure 10 — Date/Time setup screen.

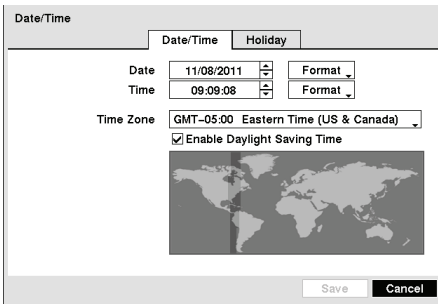

Highlight the first box beside **Date** and press the  button. The individual sections of the date will highlight. Use the **Up** and **Down** arrow buttons to change the number. Use the **Left** and **Right** arrow buttons to move between month, date and year. Once you have the correct date, press the  button.

Highlight the first box beside **Date** and press the  button. The individual sections of the date will highlight. Use the **Up** and **Down** arrow buttons to change the number. Use the **Left** and **Right** arrow buttons to move between month, date and year. Once you have the correct date, press the  button.

Highlight the **Format** box beside **Date** and press the  button. Select from the three available date formats and press the  button to save your selected format.

Highlight the **Format** box beside **Time** and press the  button. Select from the three available time formats and press the  button to save your selected format.

NOTE: The clock will not start running until you have highlighted **Save and pressed the  button.**

Highlight the box beside **Time Zone** and press the  button. Select your time zone from the list and press the  button.

NOTE: The Time Zone can also be selected on the map below by pressing the **Left and **Right** buttons or scrolling the mouse wheel up and down.**

Highlight **Enable Daylight Saving Time** and press the  button. Pressing the  button toggles between **On** and **Off**.

Highlight the **Holiday** tab, and the **Holiday** setup screen appears.

Figure 11 — Holiday setup screen.

You can set up holidays by highlighting + and pressing the button. The current date appears.

Highlight the month and day and change them by using the Up and Down arrow buttons. Press the button to add the date. Dates can be deleted by highlighting the X beside the date and pressing the button.

NOTE: Holidays that do not fall on the same date each year should be updated once the current year's holiday has passed.

Storage

Highlight **Storage** in the System menu and press the button. The **Storage** setup screen appears and displays information about the DVR's storage devices.

Figure 12 — Storage Information setup screen.

The information in the **Type** column describes the storage device.

The capacity of the storage device is displayed in the **Capacity** column.

The **Format** column displays whether the device is used for recording (**Record**) or not (**Not Using**). **Not formatted** indicates the device is not formatted.

Highlight the box in the **Format** column for the desired storage device and press the button. You will be able to format the device for recording. When selecting **Not Using** from **Use As** and highlighting the **Format** button, the device will not be used for recording.

NOTE: The DVR does NOT support USB hard disk drives with a version lower than 2.0.

The **Information** column displays whether the device is being used or not. **Other** indicates the device has been used for another DVR.

Highlight the box in the **Information** column for the desired storage device and press the button. The box beside **Recorded Data – From / To** displays the time information of recorded data.

Highlighting **Clear** and pressing the button will clear all video data. You will be asked to verify that you wish to clear all data before the DVR erases the video data.

CAUTION: Do NOT disconnect the USB cable or the power from the device while copying video clips. If the USB cable is disconnected while copying video clips, archived data might be lost.

Highlight the Status tab, and the Storage Status setup screen displays.

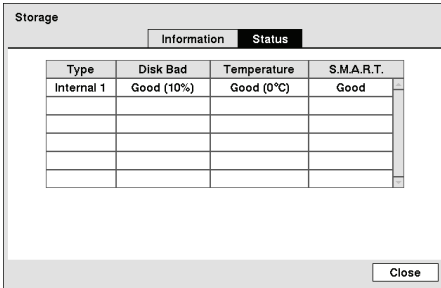


Figure 13 — Storage Status setup screen.

The **Type** column displays the type of storage device.

The **Disk Bad** column displays the percentage of bad sectors.

- Not formatted – The device is not formatted.
- Good – Less than user-defined percentage of bad disk sections is damaged.
- Bad – More than user-defined percentage of bad disk sections is damaged.

The **Temperature** column displays the temperature of the storage device.

- Good – The temperature does not exceed the user-defined temperature threshold.
- Bad – The temperature exceeds the user-defined temperature threshold.
- N/A – The DVR cannot read the temperature.


The **S.M.A.R.T.** column displays “Good”, “Bad” or “N/A”, depending on storage conditions.

- Good – The storage condition is normal.
- Bad – Data cannot be written on or read from the storage device.
- N/A – Storage conditions are normal, however, the S.M.A.R.T. monitoring is not working or supported.

NOTE: When the S.M.A.R.T. displays *Bad*, the screen displays a message box. Once the “Bad” message displays, replacing the hard disk drive is recommended, usually within 24 hours.

NOTE: *Temperature* and *S.M.A.R.T.* information will be available only for internal hard disk drives supporting the SMART (Self-Monitoring Analysis and Reporting Technology) monitoring program.

User

Highlight User in the System menu and press the  button. The User setup screen displays the authorized groups and users. You can add and delete groups and users. When adding a group, you can assign authority levels to the group.

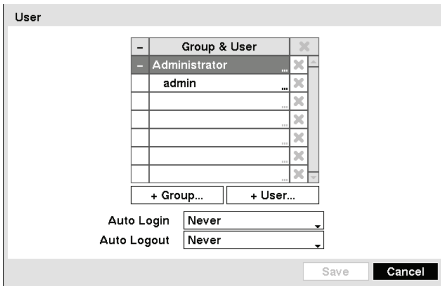


Figure 14 — User setup screen.

The +/- column is used to collapse and expand user groups. If there is a + or – in this column, it indicates the item is a Group Name. If there is a – in front of the Group Name, it indicates that the group has been “expanded” and all of the User Names within that group are displayed below the Group Name. If there is a + in front of the Group Name, it indicates that the group has been “collapsed” and all of the User Names within that group are hidden. To collapse or expand a group, highlight the +/- column in front of the desired group and press the button.


Highlighting a Group Name and pressing the button allows you to change the authority levels assigned to the group.

CAUTION: Write down the new password and save it in a secure place. If the password is forgotten, the unit must be reset using the *Factory Reset Button* and all data settings will be lost.

Highlighting a User Name and pressing the button allows you to add or change the password assigned to that user. You can also change the group to which the user is assigned.

The column can be used to delete a User Name or an entire Group. If the is grayed out, that Group or User cannot be deleted. Highlight the and press the button. You will be asked to confirm that you want to delete the User or Group. To delete the User currently logged into the DVR on a local system or a PC running RAS, log the user out of the system first and then delete the user.


To add a Group, highlight the + Group... box and press the button. A virtual keyboard appears allowing you to enter the Group name.

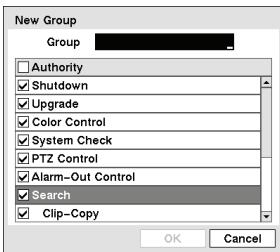


You can use up to 15 characters including spaces in the group name. Enter the name and assign authority levels to the group. Highlighting the Authority box and pressing the button will toggle between all authority levels being turned On and Off. Highlighting the individual authority level boxes and pressing the button will toggle between that authority level being turned On and Off. The authority levels that can be turned On and Off are:

- **Shutdown** – The user can shut the system down on a local system.
- **Upgrade** – The user can upgrade the software on a local system or a PC running RAS.
- **Color Control** – The user can control brightness, contrast, hue and saturation for cameras on a local system or a PC running RAS.
- **System Check** – The user can view the remote system status or check the remote system status as a batch process on a PC running RAS.
- **PTZ Control** – The user can control the PTZ camera on a local system or a PC running RAS.

- **Alarm-Out Control** – The user can reset the DVR's outputs including the internal buzzer during an alarm by pressing any button on the front panel or remote control on a local system or alarm-out control button on a PC running RAS.
- **Search** – The user can access the Search mode on a local system or a PC running RAS.
- **Clip-Copy** – The user can copy video clips on a local system or a PC running RAS.
- **Setup** – The user without Setup authority cannot establish any system settings excluding system shutdown and logout on a local system or a PC running RAS.
- **System Time Change** – The user can change the system date and time on a local system or a PC running RAS.
- **Data Clear** – The user can clear all video data or format disks on a local system or a PC running RAS.
- **PTZ Setup** – The user can establish all PTZ settings on a local system or a PC running RAS.
- **Alarm-Out Setup** – The user can establish all Alarm-Out settings on a local system or a PC running RAS.
- **Record Setup** – The user can establish all Record settings on a local system or a PC running RAS.


To add a User, highlight the + User... box and press the  button. A virtual keyboard appears allowing you to enter the User Name. Enter the name and assign the User to a Group and password. You can use camera buttons on the front panel to assign the password. The password can be up to 8 digits. You will be asked to confirm the password.

NOTE: In addition to using the front panel buttons or the infrared remote control, you can use the virtual keyboard to assign the password. To display the virtual keyboard click the  button using the mouse.

Highlighting the box beside Auto Login allows you to select a User to be automatically logged in when the DVR is powered up. It can also be set to never automatically login a user.

Highlighting the box beside Auto Logout allows you to select from a list of times that the user will be automatically logged out. The options are: Never, 1 min., 3 min., 5 min., 10 min., 15 min., 20 min., 30 min. and 1 hr.

Wizard

Highlight Wizard and press the  button. The Wizard setup screen appears. The Wizard setup guides you through configuring the system for basic operation.

NOTE: This *Wizard* screen can only be accessed when logged on as the *admin* user.

Select either Quick wizard or Network wizard and select the Next button to start the selected setup wizard.

NOTE: Selecting the *Cancel* button throughout the screens exits the Quick Setup Wizard without saving your changes and returns to the main setup screen.

Figure 15 — Setup Wizard screen.

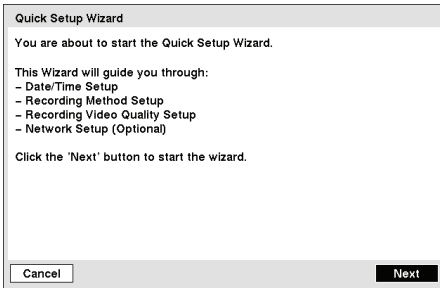


Figure 16 — Quick Setup Wizard screen.



If you selected the Quick wizard, selecting the Next button starts the Quick Setup Wizard.

Date/Time Setup


- **Date:** Set the system date and select the date format.
- **Time:** Set the system time and select the time format.
- **Time Zone:** Select your time zone. The Time Zone can be selected on the map.
- **Use Daylight Saving Time:** Selecting the box sets the system to use daylight saving time.


NOTE: The Date/Time will be set, and the clock will start when you click the **Next** button.

Record Method Setup

- Select the desired recording mode from:
 - Motion Event Record (Recommended)
 - Continuous & Motion Event Record
 - Continuous Record

NOTE: You should understand each recording mode before setting the DVR's recording method.

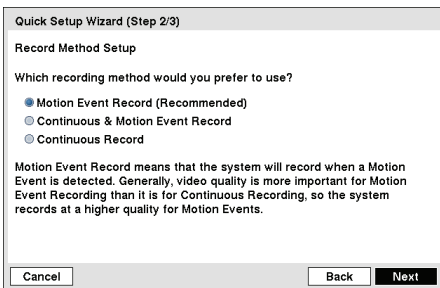

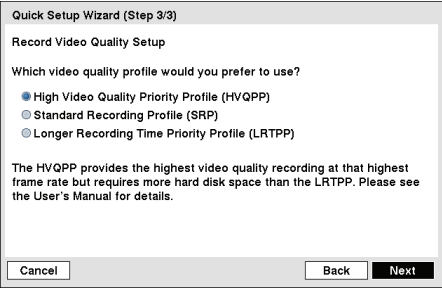

Record Video Quality Setup

- Select the desired video quality profile from:
 - Higher Video Quality Priority Profile
 - Standard Recording Profile
 - Longer Recording Time Priority Profile


NOTE: The higher quality setting requires more storage space.

NOTE: The recording resolution will be set to Very High when selecting *High Video Quality Priority Profile*, High when selecting *Standard Recording Profile*, and Standard when selecting *Longer Recording Time Priority Profile*.


NOTE: The recording quality and recording speed of each camera channel will be set as shown below according to the *Record Method* and *Record Video Quality* you set.

	HVQPP*	SRP*	LRTPP*
Motion Event Record	Very High / 15 ips	High / 5 ips	Standard / 2.5 ips
Continuous & Motion Event Record	Very High / 15 ips (Time) Very High / 15 ips (Event)	High / 5 ips (Time) Very High / 30 ips (Event)	Standard / 2.5 ips (Time) High / 5 ips (Event)
Continuous Record	Very High / 15 ips	High / 5 ips	Standard / 2.5 ips

* Record Video Quality: HVQPP (High Video Quality Priority Profile), SRP (Standard Recording Profile), LRTPP (Longer Recording Time Priority Profile)

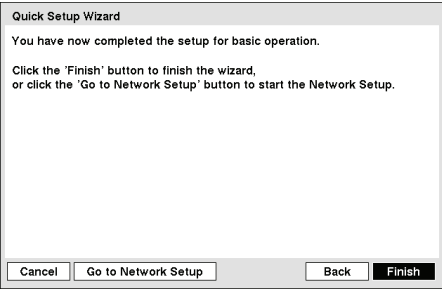

Select the Finish button to finish the Quick Setup Wizard and select the Go to Network Setup button to start the Network Setup.

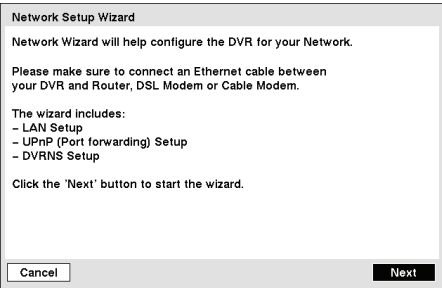

If you selected the Go to Network Setup, select the Next button to start the Network Setup Wizard.

Figure 17 – Network Setup Wizard screen.

Network Setup Wizard (Step 1/3)

Internet Connection

Is your DVR connected to the Internet?

☒ Yes (I will use an Internet connection)
☐ No (I will Not use an Internet connection)

Cancel Back Next

Internet Connection

Select whether or not your DVR is connected to the Internet.

Network Setup Wizard (Step 2/3)

LAN Setup

Auto Configuration Test

☒ Get IP, Gateway, Subnet Mask
☐ Use DSL/PPPoE Setup
 Search DNS Server
 Check Internet connectivity
 Search uPnP/PortForwarding

Cancel Back Next

LAN Setup

Select between Auto Configuration and Manual Configuration for network configuration, and then select the Test button to test the network configuration you selected.

NOTE: Selecting *Auto Configuration* allows the DVR to automatically obtain LAN parameters (IP address, Gateway, Subnet Mask and DNS Server address). Selecting *Manual Configuration* allows you to set up LAN parameters manually.

NOTE: The network configuration you set should be tested by selecting *Test*, otherwise the *Next* button will cannot be selected, and you cannot move to the next step.

- Use DSL/PPPoE Setup: Selecting the box allows you to set up the DSL network. Entering the ID and password for DSL connection is required.

NOTE: When the error message “No Device supporting UPnP” displays, check the NAT device supports the UPnP Port Forwarding function and the function is set to enabled.

Network Setup Wizard (Step 3/3)

DVRNS Setup

☒ Enable DVR Name Service

DVRNS Server 2dvr.com

Port 10088 (10000 ~ 12000)

☐ Enable NAT

DVR Name Check

You may register your DVR name and use it instead of the IP address when accessing the DVR through internet. Type in your preferred DVR name and check its availability.

Cancel Back Next

DVRNS Setup

- Use DVR Name Service: Select the box to use the DVR Name Service.
- DVRNS Server: Enter the IP address or domain name of the DVRNS server.
- Port: Set the port number of the DVRNS server.
- Enable NAT: Select the box when using the NAT (Network Address Translation) device.
- DVR Name: Enter the DVR name to be registered on the DVRNS server.
- Check: Select the box to check whether or not the name you entered can be used.


NOTE: The DVR name you entered should be checked by selecting *Check*, otherwise the DVRNS changes will not be saved.


NOTE: When entering no name or a name already registered on the DVRNS server, an error message displays.



Select the Finish button to finish the Setup Wizard.

Shutdown

Highlight **Shutdown** in the System menu and press the  button. The Shutdown screen displays asking you to confirm whether or not you want to shut the system down.

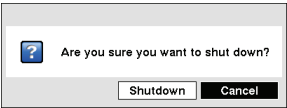


After selecting **Shutdown** and pressing the  button, a screen will appear telling you when it is safe to disconnect power.


Figure 18 — Shutdown screen.


Network Setup



Figure 19 — Network menu.

Network

Highlight **Network** in the Network menu and press the  button. The Network setup screen displays.

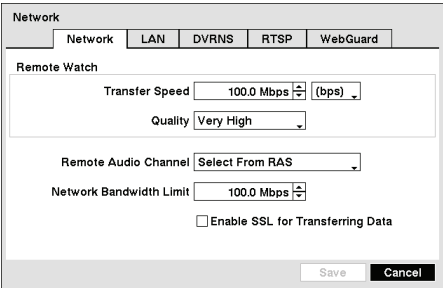

Highlight the first box beside **Remote Watch – Transfer Speed**. Press the Up and Down arrow buttons to set the Transfer Speed from 10Kbps to 100Mbps.





Highlight the second box beside **Remote Watch – Transfer Speed**. You can select the unit of measure for the transfer speed between: bps and ips. Press the  button to set the transfer speed.

Figure 20 — Network setup screen.

NOTE: The local recording speed might be affected by various network bandwidth (Transfer Speed) conditions.

Highlight the box beside Remote Watch – Quality and press the  button. You can select the Quality from: Very High, High, Standard and Basic. Press the  button to set the Quality.

NOTE: The higher Quality settings require higher Transfer Speed settings. The transfer speed you set is the maximum speed. Depending on the network environment, this speed may not be achieved.


The DVR supports two-way audio communication between a local system and a PC running RAS. Highlighting the box beside Remote Audio Channel and pressing the  button allows you to select the audio channel that sends audio to the remote site. Selecting Select From RAS will send audio of the channel selected from RAS.

NOTE: Depending on network conditions, audio might be interrupted or out of synchronization during transmission.

NOTE: Recorded audio might NOT be played properly on a PC running RAS when the DVR is connected to more than two RAS search programs at the same time.

You can limit the network bandwidth settings so that system does not consume too much network bandwidth. Highlight the box beside Network Bandwidth Limit and press the Up and Down arrow buttons to set the desired maximum bandwidth from 10Kbps to 100Mbps.

NOTE: When limiting the network bandwidth, the remote watch image on the PC running RAS or WebGuard might not be displayed properly.

Highlight Enable SSL for Transferring Data and press the  button to toggle between On and Off. When it is On, the security of data except video and audio transmitted for remote monitoring or remote recording can be enhanced by using the SSL (Secure Sockets Layer) authentication. When using the SSL function, the DVR cannot be connected with a remote program or a network keyboard which does not support the SSL function.

CAUTION: The remote connection will be disconnected temporarily after changing the SSL settings.

NOTE: This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

Highlight the LAN tab, and the LAN setup screen displays.

Figure 21 — LAN (Manual) setup screen.

Highlight the box beside **Type** and press the button. You can select the type of network configuration from: Manual, DHCP and ADSL (with PPPoE). Select the desired type and press the button.

Selecting **Manual** from the **Type** allows you to set up LAN parameters manually.

Change the numbers by highlighting them and using the Up and Down arrow buttons to increase or decrease the number. The factory default LAN settings are:

IP Address: 192.168.1.229
 Gateway: 192.168.1.1
 Subnet Mask: 255.255.255.0

NOTE: You will need to get the appropriate IP Address, Gateway and Subnet Mask from your network administrator.

Highlight the box beside **DNS Server**. Press the Up and Down arrow buttons to set the IP address of the DNS server.

Highlight **Use UPnP** and press the button to toggle between On and Off. When it is On, port forwarding from the NAT (Network Address Translation) device to the DVR will be enabled automatically via UPnP (Universal Plug and Play) service. This function will be especially useful when accessing a port on a private IP address.

NOTE: For the UPnP service to work, the NAT device should support the UPnP Port Forwarding function and the function should be set to enabled.

NOTE: You cannot change the port settings when *Use UPnP* is On.

Highlight the **Status** box and press the button to display the port numbers forwarded from the NAT device via UPnP service.

Highlight the **Port Number Setup...** box and press the button. The Port Number Setup screen appears.

Change the numbers by highlighting them and using the Up and Down arrow buttons to increase or decrease the number. The factory default Port settings are:

Remote Admin: 8200
 Remote Callback: 8201
 Remote Watch: 8016
 Remote Search: 10019

NOTE: You will need to get the appropriate Port Numbers for each RAS and WebGuard related program (Admin, Callback, Watch and Search) from your network administrator.

NOTE: Do NOT use the same port number for two different programs, otherwise, the DVR cannot be connected with the PC running RAS or WebGuard.

CAUTION: When changing the port settings, you must change the port settings on the PC running RAS as well. Refer to the RAS manual for details.

The screenshot shows the 'Network' configuration window with the 'LAN' tab selected. The 'Type' is set to 'DHCP'. The 'IP Address' field is '0.0.0.0'. The 'DNS Server' field is '0.0.0.0' with a checked 'Auto' checkbox. There is a 'Port Number Setup...' button and a 'Use UPnP' checkbox with a 'Status' button. 'Save' and 'Cancel' buttons are at the bottom.

Selecting DHCP from the Type and highlighting Save button reads the current IP address of the DVR configured by DHCP (Dynamic Host Configuration Protocol) network.

Highlight Auto (Default) and press the button to toggle between On and Off. When it is On, the DVR will obtain the IP address of the DNS server automatically.

NOTE: Selecting Auto will only be enabled when the DVR is configured for DHCP or an ADSL network.

The screenshot shows the 'Network' configuration window with the 'LAN' tab selected. The 'Type' is set to 'ADSL (with PPPoE)'. The 'IP Address' field is '0.0.0.0'. There are 'ID' and 'Password' fields. The 'DNS Server' field is '0.0.0.0' with a checked 'Auto' checkbox. There is a 'Port Number Setup...' button and a 'Use UPnP' checkbox with a 'Status' button. 'Save' and 'Cancel' buttons are at the bottom.

Selecting ADSL (with PPPoE) allows you to set up the ADSL network.

Highlight the box beside ID and press the button. A virtual keyboard appears allowing you to enter the ID for ADSL connection.

Highlight the box beside Password and press the button. A virtual keyboard appears allowing you to enter the password for ADSL connection.

NOTE: Entering the ID and Password and highlighting OK reads the current IP address of the DVR configured by the ADSL network.

NOTE: If the DVR is configured for DHCP or an ADSL network, the IP address of the DVR might change whenever the unit is turned on.

Highlight the DVRNS tab, and the DVRNS setup screen displays.

The screenshot shows the 'DVRNS' setup screen. It has a checkbox for 'Enable DVR Name Service'. Below it, the 'DVRNS Server' is '2dvr.com' and the 'Port' is '10088' with a range '(10000 ~ 12000)' and a . There is a checkbox for 'Enable NAT'. Below that, there is a 'DVR Name' field with a 'Check' button and a 'Help Desk' field. 'Save' and 'Cancel' buttons are at the bottom.

Highlight Enable DVR Name Service and press the button to toggle between On and Off.


NOTE: The DVRNS (DVR Name Service) allows the DVR to use Dynamic IP addresses for remote connection. When this feature is On, you can access your DVR remotely using the DVR name instead of its IP address. For the DVRNS feature, the DVR should be registered on the DVRNS server.

Highlight the box beside DVRNS Server and press the button. A virtual keyboard appears allowing you to enter the IP address or domain name of the DVRNS server.

Figure 22 – DVRNS setup screen.


NOTE: You will need to get the IP Address or domain name of the DVRNS Server from your network administrator.

NOTE: You can use the domain name instead of IP address if you already set up the DNS Server when setting up the LAN.

Highlight the box beside Port and press the  button. Set the port number of the DVRNS server using the Up and Down arrow buttons to increase or decrease the numbers.

Highlight Enable NAT and press the  button to toggle between On and Off.


NOTE: When using the NAT (Network Address Translation) device, refer to the NAT manufacturer' instructions for the proper network settings.

Highlight the box beside DVR Name and press the  button. A virtual keyboard appears allowing you to enter the DVR name to be registered on the DVRNS server.

Highlight the Check box and press the  button to check whether or not the name you entered can be used.

NOTE: The DVR name you entered should be checked by selecting *Check*, otherwise the DVRNS changes will not be saved.

NOTE: When entering no name or a name already registered on the DVRNS server, an error message displays.

Highlighting Save and pressing the  button registers the DVR on the DVRNS server. Proper DVRNS settings will display the help desk information of the DVRNS server in the box beside Help Desk.

Highlight the RTSP tab, and the RTSP setup screen displays.

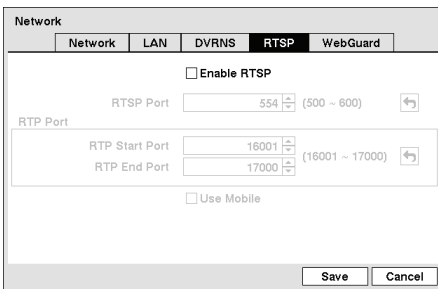






Figure 23 — RTSP setup screen.


Highlight Enable RTSP (Real-Time Streaming Protocol) and press the  button to toggle between On and Off. You will be able to change the settings if Enable RTPS is enabled.

NOTE: When selecting *Enable RTSP*, the recorded image resolution cannot be set to *Very High* during Record setup.

Highlight the box beside RTSP Port and press the  button. Set the port number of the RTSP server obtained from your system administrator.

Highlight the box beside RTP Start Port and press the  button. Set the start port number of the RTP server obtained from your system administrator.

Highlight the box beside RTP End Port and press the  button. Set the end port number of the RTP server obtained from your system administrator.

Highlight Use Mobile and press the  button to toggle between On and Off. When set to on, you can access a remote DVR using a Blackberry or other mobile devices.

- NOTE:** Selecting *Use Mobile* sets the recorded image resolution to *Basic* automatically regardless of your Record settings.
- NOTE:** Selecting *Use Mobile* sets the WebGuard service to be enabled automatically regardless of your WebGuard settings.
- NOTE:** You can access a remote DVR and monitor live video images using media players, such as VLC Player, supporting RTSP service. Start the media player on your local PC and enter “rtsp://ID:Password@IP address:RTSP port number/track ID=‘channel number’”, or start Internet Explorer on your Blackberry or other mobile devices and enter “http://IP address: Webguard port number/”.
- NOTE:** Some media players might play video properly depending on network conditions.
- NOTE:** RTSP service might not be supported, depending on the type of media player.

Highlight the WebGuard tab, and the WebGuard setup screen displays.

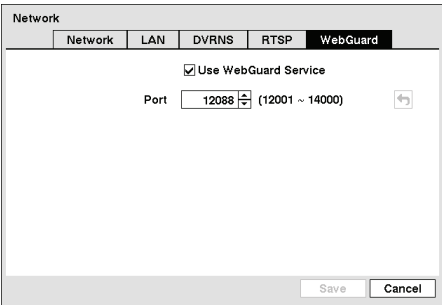

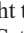



Figure 24 — WebGuard setup screen.

Highlight Use WebGuard Service and press the  button to toggle between On and Off. See *Appendix – WebGuard* for detailed descriptions of the WebGuard service.

Highlight the box beside Port and press the  button. Set the port number used when accessing WebGuard by using the Up and Down arrow buttons to increase or decrease the numbers.

Notification

Highlight Notification in the Network menu and press the  button. The Notification setup screen displays.

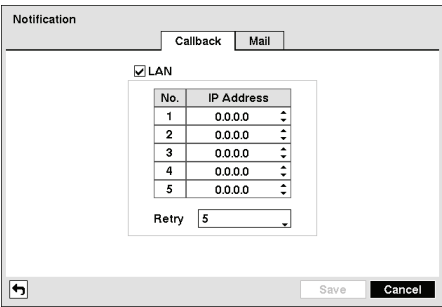

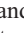


Figure 25 — Notification Callback setup screen.

The DVR can be set up to contact a computer running RAS (Remote Administration System) when an event occurs. Highlight LAN and press the  button to toggle between On and Off. When LAN is turned On you can change the IP addresses.

Highlight the IP Address box that you want to change and press the  button. Use the arrow buttons to enter the IP address of the computer you want contacted during an event. You can enter up to five IP addresses.

Highlight the box beside **Retry** and enter the number of times you would like the DVR to try contacting the computer. You can select from 1 to 10 retries.

Highlight the **Mail** tab, and the Mail setup screen displays.

Figure 26 — Notification Mail setup screen.

The DVR can be set up to send an email when an event occurs. The Mail account can be turned On or Off by highlighting the boxes under the **No.** heading and pressing the button.

Highlight the **+** and press the button to add a mail recipient.

Highlight the first box under **Recipient** and press the button. A virtual keyboard appears that you can use to enter the recipient's e-mail address.

Highlight the second box under **Recipient** and press the button. You can select between **Manual** and listed SMTP mail server providers.

NOTE: The e-mail address must include the “@” character to be a valid address.

The Mail accounts can be deleted by highlighting the beside the account and pressing the button.

Highlight **SMTP Setup...** and press the button. The SMTP Setup screen appears.

Highlight the box beside **Type** and press the button. You can select between **Manual** and listed SMTP mail server providers.

Highlight the box beside **SMTP Server** and press the button. A virtual keyboard appears that you can use to enter the IP address or domain name of the SMTP server.

NOTE: You will need to get the IP Address or domain name of the SMTP Server from your network administrator.

NOTE: You can use the domain name instead of IP address if you already set up the DNS Server when setting up the LAN.

Highlight the box beside **Port** and press the button. Use the arrow buttons to enter the SMTP Server port number obtained from your system administrator. The default port number is 25.

Highlight **Enable SSL/TLS** and press the button to toggle between On and Off. When it is On, the DVR can send an email via an SMTP server requiring SSL (Secure Sockets Layer) authentication.

NOTE: This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).




Authentication



☐ Use

User

Password


OK Cancel

Highlight the box beside Authentication and press the  button. An Authentication screen appears.

Highlight Use and press the  button to toggle between On and Off. Highlight the box beside User/Password and press the  button. A virtual keyboard appears allowing you to enter the user ID and password.

Highlight the box beside Sender and enter the sender's e-mail address. Use the virtual keyboard to enter the e-mail address.

NOTE: The e-mail address must include the "@" character to be a valid address.

Highlight the Test box and press the  button to test emailing with the current settings you made.


Devices Setup



Figure 27 — Devices menu.

Camera

Highlight Camera in the Devices menu and press the  button. The Camera setup screen appears.

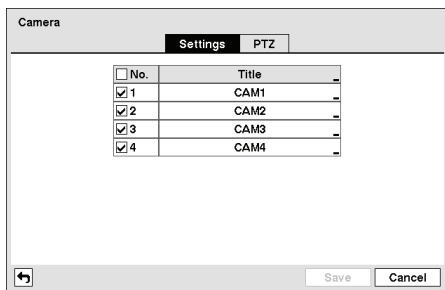

Camera

Settings PTZ


No.	Title
<input checked="" type="checkbox"/> 1	CAM1
<input checked="" type="checkbox"/> 2	CAM2
<input checked="" type="checkbox"/> 3	CAM3
<input checked="" type="checkbox"/> 4	CAM4

Save Cancel

You can turn the camera number On or Off, and you can change the Title of each camera using the virtual keyboard.


Figure 28 — Camera setup screen.

Highlight the PTZ tab, and the PTZ setup screen displays.

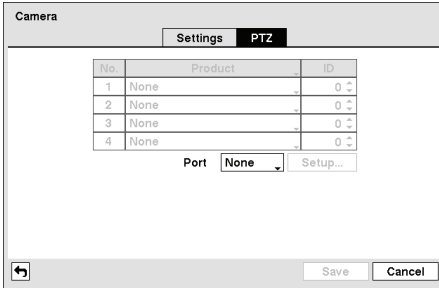

NOTE: You will only be able to set up PTZ devices if the PTZ port is set to RS232 or RS485.


Figure 29 — Camera PTZ setup screen.

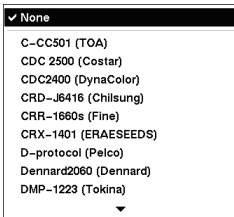

Highlight the box in the **Product** column for the PTZ camera you wish to configure and press the button. A list of PTZ devices appears. Select your camera from the list and press the button. You will need to connect the camera to the RS232 or RS485 connector on the back of the DVR following the camera manufacturer's instructions.

You can assign IDs to each camera by highlighting the box under the **ID** heading and pressing the button. Change the number by highlighting it and using the **Up** and **Down** arrow buttons to increase and decrease the number. The PTZ ID number can be set from 0 to 256.

Highlight the **Setup...** box and press the button. The Port Setup window appears.

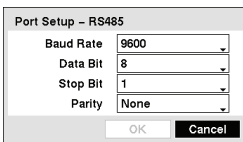

Configure the port's setting based on the PTZ camera manufacturer's instructions.

Audio

Highlight **Audio** in the **Devices** menu and press the button. The Audio setup screen appears.

No.	Associated Camera
1	None

☒ Enable Audio-Out

Save Cancel

Figure 30 — Audio setup screen.

Alarm-Out

Highlight Alarm-Out in the Devices menu and press the button. The Alarm-Out screen allows you to change the settings for the alarm output from the DVR.

No.	Title	Type
1		NO

Dwell Time 5 sec.

Save Cancel

Figure 31 — Alarm-Out Settings setup screen.

Display

Highlight Display in the Devices menu and press the button. The Display screen allows you to select what information will be displayed on the monitor.

Highlight the box beside the input and press the button. A list of cameras appears, and you can select which camera you want associated with that audio input.

Highlight Enable Audio-Out and press the button. This toggles between enabling and disabling audio out.

NOTE: The DVR will NOT record audio when the recording speed is set to less than 1 ips.

The alarm output can be given its title by highlighting the box under the Title heading and pressing the button. A virtual keyboard appears allowing you to enter the title.

Highlighting the box beside Dwell Time and pressing the button allows you to set the dwell time of the alarm output. Dwell times range from 5 seconds to 1 minute.


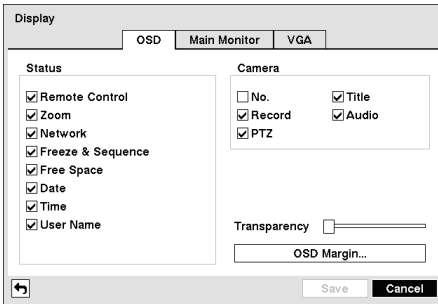


Figure 32 — Display OSD setup screen.

- Remote Control – The icon displays when the DVR can be controlled by the infrared remote control.
- Zoom – The icon displays on the enlarged video.
- Network – The icon displays when the unit is connected to a network via Ethernet. The icon displays when audio communication is available between the DVR and a PC running RAS via Ethernet.
- Freeze & Sequence – The icon displays while in the Freeze mode, and the displays while in the Sequence mode.
- Free Space – The icon displays when the DVR is in the Recycle mode, and the percentage of available storage space displays when the DVR is not in the Recycle mode.
- Date/Time – The current date and time information displays.
- User Name – The name of the current user logged in displays.
- Camera No. – The camera number displays at the top-left corner of each camera screen.
- Camera Title – The camera title displays at the top-left corner of each camera screen.
- Record – The record related icons display on each camera screen.
- Audio – The icon displays when the DVR can play live audio.
- PTZ – The icon displays on each PTZ camera screen.

You can adjust the transparency of the setup screens by highlighting Transparency and using the Left and Right arrow buttons.

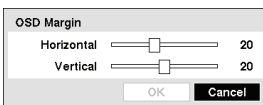

Highlighting OSD Margin... and pressing the button displays how OSD text will be displayed on the monitor. You can adjust the horizontal and vertical margins so that text and icons will not be hidden beyond the edges of the monitor.

Highlight the Main Monitor tab, and the Main Monitor setup screen appears.

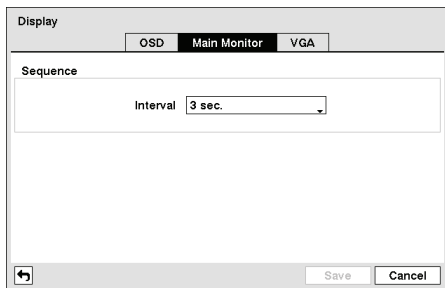


Figure 33 — Main Monitor setup screen.

Highlight the VGA tab, and the VGA setup screen appears.


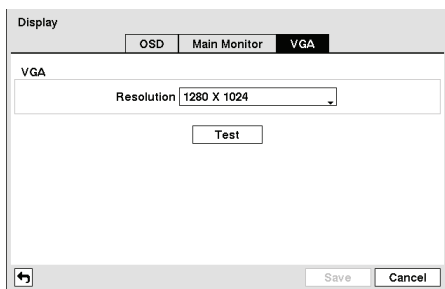


Figure 34 — VGA setup screen.

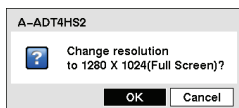


Highlighting OK and pressing the  button applies resolution changes.

Recording Setup



Figure 35 — Record menu.

Record

Highlight Record in the Record menu and press the  button. The Record setup screen appears.

The image shows a 'Record' settings window with two tabs: 'Settings' and 'Panic Record'. The 'Settings' tab is active. It contains the following controls:

- ☒ Recycle
- Resolution: High (dropdown menu)
- Event Record Dwell: 1 min. (dropdown menu)
- ☐ Record Audio
- Auto Deletion: 0 (spinners) / Never (radio button)
- Limit Time-Lapse Recording: (empty box) / Never (radio button)

At the bottom left is a back arrow button. At the bottom right are 'Save' and 'Cancel' buttons.

Figure 36 — Record setup screen.

Highlighting **Recycle** and pressing the button toggles between On and Off. In the **Recycle** mode, the DVR records over the oldest video data once all available storage space has been used. When **Recycle** is turned off, the DVR stops recording once all available storage space has been used.

Highlight the **Resolution** box and select from **Very High**, **High** and **Standard**.

NOTE: The total ips of all camera channels will be limited to 120 ips when set to **High** resolution and 60 ips when set to **Very High** resolution.

NOTE: The DVR has two camera groups (No. 1: cameras 1 and 2 and No. 2: cameras 3 and 4), and the maximum recording speed of each camera group will be limited to 30 ips when set to **Very High** resolution. For example, the maximum recording speed per camera will be 15 ips per camera when set to **On** for all cameras, and 30 ips per camera when set to **On** for one camera in the same camera group.

Highlight the **Event Record Dwell** box and set the length of time you would like to record for the associated event. You can set the dwell from 5 seconds to 1 minute. Refer to *Event Actions* screen in this chapter for information regarding event recording.

Highlighting **Record Audio** and pressing the button toggles between On and Off. When set to On, the DVR will record audio when video is recording.

NOTE: The DVR will NOT record audio when the recording speed is set to less than 1 ips.

Highlight the box beside **Auto Deletion**, and use the Left and Right arrow buttons to adjust the length of time recorded data will be kept from 1 to 999 days. The DVR automatically deletes video recorded earlier than the user-defined period under three conditions: at midnight, whenever the system reboots or whenever the user changes the **Auto Deletion** settings. Selecting **Never** will disable the **Auto Deletion** function.

Highlight the slide bar beside **Limit Time-Lapse Recording**, and use the Left and Right arrow buttons to adjust the length of the maximum storage time for time-lapse recording from 1 to 99 days. The **Limit Time-Lapse Recording** feature will function when the storage device has enough space to record video data longer than the preset period. When this feature is On, the DVR records over the oldest “time-lapse” video once all available storage has been used in the **Recycle** mode, so more event video can be saved. Selecting **Never** will disable the **Limit Time-Lapse Recording** function.

NOTE: When the storage device does not have enough space to record video data longer than the preset **Limit Time-Lapse Recording** period, the DVR records over the oldest video data (time-lapse or event video) as it would in the **Recycle** mode even if this feature is turned On.

NOTE: The maximum storage time is only an estimate because the amount of space required to store video varies depending on many factors such as motion and image complexity.

Highlight the Panic Record tab, and the Panic Record setup screen appears.

The screenshot shows the 'Panic Record' tab selected. It features a checkbox for 'Use Panic Recording' which is checked. Below it are three dropdown menus: 'Panic Recording Duration' set to '15 min.', 'Ips' set to '30.00 ips', and 'Quality' set to 'High'. At the bottom are 'Save' and 'Cancel' buttons.

Figure 37 — Panic Record setup screen.

Highlighting Use Panic Recording and pressing the button toggles between On and Off.

Highlight the Panic Recording – Duration box and set the duration of panic recording. Panic recording will stop automatically after the preset duration as long as the **PANIC** button is not pressed to stop the panic recording. You can set the dwell from 5 minutes to 1 hour. Select No Limit if you want to stop panic recording manually.

Highlighting the Panic Recording – ips and pressing the button allows you to set the images per second for Panic recording. You can select from 0.10 to 30.00 ips (25.00 ips PAL).

Highlighting the Panic Recording – Quality and pressing the button allows you to set the recorded image quality for Panic recording. You can select from: Very High, High, Standard and Basic.

Schedule

Highlight Schedule in the Record menu and press the button, and the Schedule setup screen appears.

The screenshot shows the 'Schedule' tab with a 'Schedule On' checkbox checked. Below is a table with columns: No., Day, Range, Mode, Channels, Settings, and a delete icon. The first row is pre-filled with '1', 'All', '00:00 ~ 24:00', a red icon, '1~4', and '...'. There are empty rows below and a '+' button at the bottom left. 'Default...' and 'Cancel' buttons are at the bottom right.

No.	Day	Range	Mode	Channels	Settings	
1	All	00:00 ~ 24:00		1~4	...	

Figure 38 — Schedule setup screen.


You can program the DVR to record only during certain times based on time, day of the week, and holidays. The smallest time segment you can use is 15 minutes.

Highlighting Schedule On and pressing the button toggles between On and Off. In the Schedule On mode, the DVR records video based on the schedule established in the Schedule screen. When turning Schedule recording Off, you will be asked to confirm your decision, and displays at the top-left corner of each camera screen. Panic recording will function even when Schedule is turned off. displays during panic recording.



Highlight the + and press the button to add a schedule item.






Highlight the box under the Day heading and press the button to change the days that the scheduled recording will take place. Choose from: Sun, Mon, Tue, Wed, Thu, Fri, Sat, M~F, Hol and All.



Highlight the box under the Range heading and press the button to change the time range that the scheduled recording will take place. The smallest time segment you can use is 15 minutes.

Highlight the box under the **Mode** heading and press the  button to change the recording mode that will be used. Choose from: No Record, Time, Event and Time & Event.


When the DVR is in the **No Record** mode, it will not record during the preset day and time range as long as the **PANIC** button is not pressed. Use the **No Record** mode when you do NOT want the DVR to record during certain times.

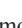When the DVR is in the **Time** mode, the  icon displays at the top-left corner of the screen. The DVR will record and displays the  icon at the top-left corner of the screen during the scheduled times.

When the DVR is in the **Event** mode, the red  icon displays at the top-left corner of the screen. The DVR will record and displays the  icon at the top-left corner of the screen when any event occurs. When the DVR is in the **Pre-Event** recoding mode, the yellow  icon displays when there is no event, and the DVR is not recording. When the DVR is in the **Pre-Event** mode, the red  and  display when any event occurs and the DVR starts recoding.


When the DVR is in the **Time & Event** mode, the DVR will follow the Time settings and the  icon displays. The DVR follows the Event settings and the  icon displays.

Highlight the box under the **Channels** heading and press the  button to select which cameras will be recorded.

Highlight the box under the **Settings** heading and press the  button to define the recording settings. You can set the ips and Quality of the recording. If you do not set the ips and Quality in the Settings column, the DVR will follow the default settings. See below for details.


NOTE: Day, Range and Channels that are not defined will use the setting values of the previous schedule item.


NOTE: When more than two schedule items are registered in the same day and time range, the DVR will follow the latest registered schedule item.


Highlight the box under the **X** heading and press the  button to delete the recording settings. You will be asked to confirm that you want to delete the settings.

Highlight **Default...** and press the  button. The **Default** screen appears.


Default		
Mode	ips	Quality
Time	15.00 ips	Standard
Event	30.00 ips	High



Highlighting boxes under **ips** and pressing the  button allows you to set the images per second for Time and Event recording. You can select from 0.10 to 30.0 images per second.

Highlighting boxes under **Quality** and pressing the  button allows you to set the recorded image quality for Time and Event recording. You can select from: Very High, High, Standard and Basic.

Pre-Event

Highlight **Pre-Event** in the Record menu and press the  button, and the **Pre-Event** setup screen appears. If you do not have Event set up in the Record Schedule, a message will display alerting you to this fact.

<input type="checkbox"/> No.	ips	Quality	Dwell
<input type="checkbox"/> 1. CAM1	15.00 ips	High	05 sec.
<input type="checkbox"/> 2. CAM2	15.00 ips	High	05 sec.
<input type="checkbox"/> 3. CAM3	15.00 ips	High	05 sec.
<input type="checkbox"/> 4. CAM4	15.00 ips	High	05 sec.

Save Cancel

Figure 39 — Pre-Event setup screen.

You can set the amount of time to record prior to the event by adjusting the **Dwell**. You can set the **Dwell** from 5 seconds to 30 seconds. The longer the dwell set, the fewer maximum ips can be set.

NOTE: When the DVR is in the Time or Time & Event mode, it ignores the pre-event settings and follows the time settings.

Event Setup

- Event
- Alarm-In
- Motion Detection
- Video Loss
- System Event
- Event Status

Figure 40 — Event menu.

Alarm-In

Highlight **Alarm-In** in the Event menu and press the **OK** button. The **Alarm-In** setup screen appears.

<input type="checkbox"/> No.	Title	Type
<input type="checkbox"/> 1	Alarm-In 1	NC
<input type="checkbox"/> 2	Alarm-In 2	NC
<input type="checkbox"/> 3	Alarm-In 3	NC
<input type="checkbox"/> 4	Alarm-In 4	NC

Panic Record: None

Save Cancel

Figure 41 — Alarm-In Settings setup screen.


When the DVR is in the Event Record mode it is possible to have it record images before the event occurs. The **Pre-Event** screen allows you to define how to handle pre-event recording.

You can turn individual cameras On or Off for pre-event recording. The image speed can be set from 0.10 to 30.00 ips (25.00 ips PAL), and image quality can be selectable from Very High, High, Standard and Basic.


The alarm terminal strip on the back of the DVR has inputs associated with each alarm. You can set up each input on the **Alarm-In** screen. You can turn each input On or Off by highlighting the alarm number and pressing the **OK** button.








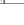


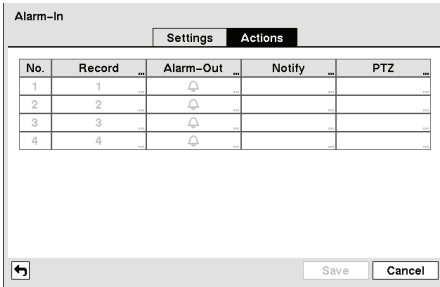

Each input can be given a title. Highlight the desired Title box and press the **OK** button. A virtual keyboard appears allowing you to enter a title name.

Each input can be set as NO (normally open) or NC (normally closed).

You can set up the DVR to start panic recording whenever it senses an input on one of its alarm input connectors. Highlight the box beside **Panic Record** and press the  button. A list of Alarm Inputs appears, and you can select which alarm input you want associated with panic recording. The DVR will continue panic recording until an input on the selected alarm input is released as long as the **PANIC** button is not pressed to stop the panic recording.

Highlight the **Actions** tab, and the Alarm-In Actions setup screen appears.




No.	Record	Alarm-Out	Notify	PTZ
1	1			
2	2			
3	3			
4	4			


Save Cancel

Figure 42 — Alarm-In Actions setup screen.


You can set the actions the DVR will take whenever it senses an input on one of its alarm input connectors.


Highlight the desired box under the **Record** heading, and press the  button. A list of cameras appears. Select the cameras that you want the DVR to record whenever it detects an input on the associated alarm input.

NOTE: For the Record action, the camera you select should be set to the Event or Time & Event recording mode in the Record Schedule setup screen.

Highlight the desired box under the **Alarm-Out** heading, and press the  button. Select between Alarm Output and Beep (DVR's internal buzzer) that you would like to activate and to sound whenever the DVR detects an input on the associated alarm input.

NOTE: For the Alarm-Out action, the alarm output and beep you select should be set to the Event mode in the Alarm-Out setup screen (Schedule tab).

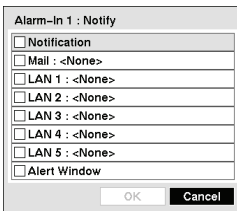


Highlight the desired box under the **Notify** heading, and press the  button. The Alarm-In Notify menu appears.




Alarm-In 1 : Notify

- ☐ Notification
- ☐ Mail : <None>
- ☐ LAN 1 : <None>
- ☐ LAN 2 : <None>
- ☐ LAN 3 : <None>
- ☐ LAN 4 : <None>
- ☐ LAN 5 : <None>
- ☐ Alert Window

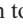
OK Cancel

You can toggle the entire list On and Off by highlighting Notification and pressing the  button. You can toggle the individual items On and Off by highlighting that item and pressing the  button. Highlight OK and press the  button to accept your changes.

NOTE: For the Notify action, the notify item you select should be enabled in the Notification setup screen and the DVR should be registered in the RAS (Remote Administration System).

Highlight the desired box under the **PTZ** heading, and press the  button. A list of PTZ presets appear. Select the preset position for each PTZ camera, where you want PTZ cameras to move to whenever the DVR detects an input on the associated alarm input.

Motion Detection

Highlight Motion Detection in the Event menu and press the  button. The Motion Detection setup screen appears.



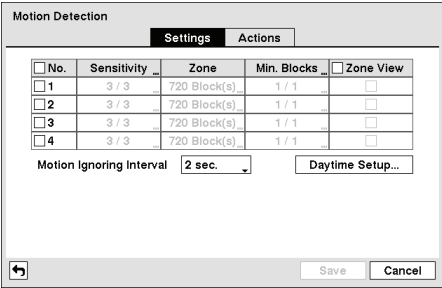


Figure 43 — Motion Detection Settings setup screen.

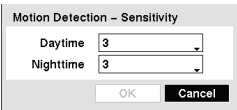

Highlighting the box under the Sensitivity heading and pressing the button allows you to adjust the DVR's sensitivity to motion for Daytime and Nighttime independently. There are five settings with 1 being the least sensitive and 5 being the most sensitive.

You can define the area of the image where you want to detect motion; e.g., a doorway. Highlight the box under the Zone heading, and press the button. The Motion Detection Zone screen displays.

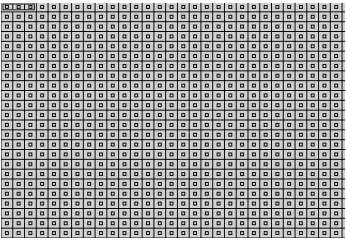


The Motion Detection Zone screen is laid over the video for the selected camera. You can set up motion detection zones by selecting or clearing blocks.

NOTE: You can set up motion zones one block at a time in groups of three individual block groups. A block group is positioned within the image area using the Up and Down arrow buttons, and individual blocks within the block groups are selected or cleared using the camera buttons.

Press the button to display the menu screen. The menu on the setup screen has the following functions:




- Select — Activates highlighted blocks to detect motion.
- Clear — Deactivates highlighted blocks so that they will not detect motion.
- Reverse — Activates inactive highlighted blocks and deactivates active highlighted blocks.
- Select All — Activates all blocks to detect motion.
- Clear All — Deactivates all blocks so that they will not detect motion.
- Reverse All — Activates inactive blocks and deactivates active blocks.
- OK — Accepts changes and closes Zone setup.
- Cancel — Exits Zone setup without saving changes.

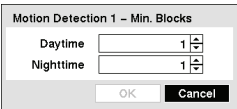


You can adjust the minimum number of detection blocks that must be activated to trigger a motion alarm. Highlighting the box under the Min. Blocks heading and pressing the button allows you to adjust the minimum number of detection blocks for Daytime and Nighttime independently. Smaller numbers provide greater sensitivity because fewer detection blocks must be activated.

Turning **Zone View On** will allow you to observe how the DVR is reacting to motion. When in the motion viewing mode, any detected motion within the zone will be displayed in red.


You can control excessive event logging and remote notification of motions detected after the motion dwell time by adjusting the motion ignoring dwell intervals. Highlight the box beside **Motion Ignoring Interval** and press the  button. A list of intervals ranging from 1 to 10 seconds or **Never** appears. The DVR will not log and notify motion events occurred during the preset interval range.

NOTE: The record action for motion events will not be affected by the Motion Ignoring function.


Highlighting **Daytime Setup** and pressing the  button allow you to set up the Daytime range.

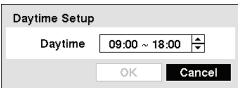


Daytime Setup

Daytime 09:00 ~ 18:00 

OK Cancel

Highlight the box beside **Daytime** and press the  button. Use the Up and Down arrow buttons to set the Daytime range. The DVR will consider the remaining time range as the Nighttime.

Highlight the **Actions** tab, and the Motion Detection Actions setup screen appears.

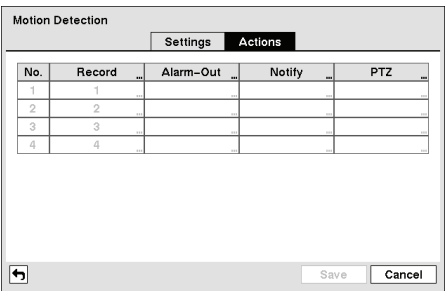

Motion Detection

Settings Actions


No.	Record	Alarm-Out	Notify	PTZ
1	1			
2	2			
3	3			
4	4			

Save Cancel


The DVR can be set to react to motion detection differently for each camera. Each camera can be associated with another camera, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, and/or move PTZ cameras to preset positions.

NOTE: You can associate multiple cameras with a camera that detects motion.





Figure 44 — Motion Detection Actions setup screen.

Highlight the box under the **Record** heading and press the  button. A list of cameras appears. You can associate as many cameras with that camera as you wish. If the DVR detects motion on the selected camera, it starts recording video from all the associated cameras.


NOTE: For the Record action, the camera you select should be set to the Event or Time & Event recording mode in the Record Schedule setup screen.

Highlight the box under the **Alarm-Out** heading and press the  button. Select between Alarm Output and Beep (DVR's internal buzzer) that you would like to activate and to sound whenever the DVR detects motion on the selected camera's input.

NOTE: For the Alarm-Out action, the alarm output and beep you select should be set to the Event mode in the Alarm-Out setup screen (Schedule tab).


Highlight the box under the **Notify** heading and press the  button. You can toggle the entire list On and Off by highlighting Notification and pressing the  button. You can toggle the individual items On and Off by highlighting that item and pressing the  button. Highlight OK and press the  button to accept your changes.

NOTE: For the Notify action, the notify item you select should be enabled in the Notification setup screen and the DVR should be registered in the RAS (Remote Administration System).

Highlight the desired box under the PTZ heading, and press the  button. A list of PTZ presets appear. Select the preset position for each PTZ camera, where you want PTZ cameras to move to whenever the DVR detects motion on the selected camera's input.

Video Loss

Highlight Video Loss in the Event menu and press the  button. The Video Loss setup screen appears.

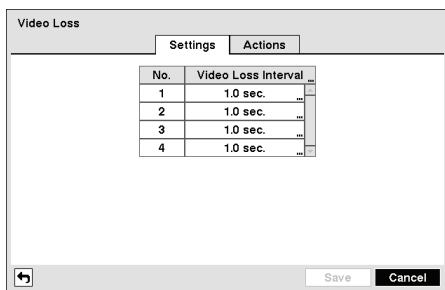


The Video Loss Settings setup screen displays a table with two columns: No. and Video Loss Interval. The table has four rows, each with a number (1, 2, 3, 4) and a value of 1.0 sec. There are buttons for Settings and Actions at the top, and a back arrow, Save, and Cancel button at the bottom.

No.	Video Loss Interval
1	1.0 sec.
2	1.0 sec.
3	1.0 sec.
4	1.0 sec.

Figure 45 — Video Loss Settings setup screen.

Highlight the Actions tab, and the Video Loss Actions setup screen appears.

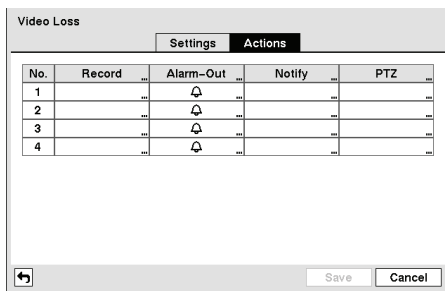

The Video Loss Actions setup screen displays a table with five columns: No., Record, Alarm-Out, Notify, and PTZ. The table has four rows, each with a number (1, 2, 3, 4) and buttons for Record, Alarm-Out, Notify, and PTZ. There are buttons for Settings and Actions at the top, and a back arrow, Save, and Cancel button at the bottom.






No.	Record	Alarm-Out	Notify	PTZ
1				
2				
3				
4				


Figure 46 — Video Loss Actions setup screen.

Highlighting the box under the Video Loss Interval heading allows you to set the duration of a signal loss before the DVR will report a Video Loss. The DVR will not consider any signal loss from a camera to be a Video Loss if the detected signal loss is shorter than the interval set on this screen.





The DVR can be set to react to video loss differently for each camera. Each camera can be associated with another camera, trigger an Alarm-Out connector, sound the DVR's internal buzzer, notify a number of different devices, and/or move PTZ cameras to preset positions.

Highlight the box under the Record heading and press the  button. A list of cameras appears. You can associate as many cameras with that camera as you wish. If the DVR detects video loss on the selected camera, it starts recording video from all the associated cameras.


NOTE: For the Record action, the camera you select should be set to the Event or Time & Event recording mode in the Record Schedule setup screen.

Highlight the box under the Alarm-Out heading and press the  button. Select between Alarm Output and Beep (DVR's internal buzzer) that you would like to activate and to sound whenever the DVR detects video loss on the selected camera.


NOTE: For the Alarm-Out action, the alarm output and beep you select should be set to the Event mode in the Alarm-Out setup screen (Schedule tab).

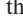
Highlight the box under the Notify heading and press the  button. You can toggle the entire list On and Off by highlighting Notification and pressing the  button. You can toggle the individual items On and Off by highlighting that item and pressing the  button. Highlight OK and press the  button to accept your changes.

NOTE: For the Notify action, the notify item you select should be enabled in the Notification setup screen and the DVR should be registered in the RAS (Remote Administration System).

Highlight the desired box under the PTZ heading, and press the  button. A list of PTZ presets appear. Select the preset position for each PTZ camera, where you want PTZ cameras to move to when the DVR detects video loss on the selected camera's input.

System Event

Highlight System Event in the Event menu and press the  button. The System Event setup screen appears.

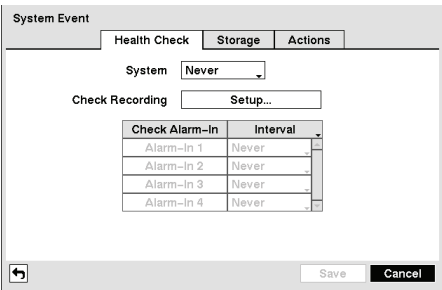


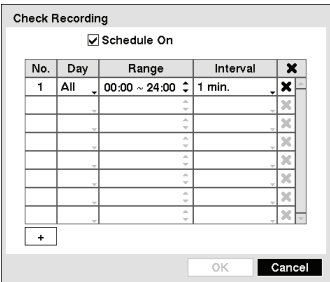
The System Event setup screen has three tabs: Health Check, Storage, and Actions. The Health Check tab is active. It contains a 'System' dropdown menu set to 'Never' and a 'Check Recording' section with a 'Setup...' button. Below this is a table with two columns: 'Check Alarm-In' and 'Interval'. The table has four rows for 'Alarm-In 1' through 'Alarm-In 4', each with a dropdown menu set to 'Never'. At the bottom are 'Save' and 'Cancel' buttons.

Check Alarm-In	Interval
Alarm-In 1	Never
Alarm-In 2	Never
Alarm-In 3	Never
Alarm-In 4	Never

Figure 47 — Health Check setup screen.


The DVR can be configured to run self-diagnostics and report the results.


Highlighting the box beside System and pressing the  button allows you to select the interval that you want the DVR to run self-diagnostics on the system. You can select from 1 hr. to 30 days or Never.




The Check Recording setup screen has a 'Schedule On' checkbox checked. Below it is a table with columns: No., Day, Range, Interval, and a delete button (X). The first row is pre-filled with '1', 'All', '00:00 ~ 24:00', and '1 min.'. There are empty rows below for adding more schedules. At the bottom are 'OK' and 'Cancel' buttons.

No.	Day	Range	Interval	
1	All	00:00 ~ 24:00	1 min.	X

Highlight the Setup... box beside Check Recording and press the  button. The Check Recording screen appears.

Highlighting Schedule On and pressing the  button toggles On and Off. When set to On, you can select the day, time range and interval that you want the DVR to run self-diagnostics on the recorder. The Interval can be selectable from 1 min. to 7 days or Never. The **X** box allows you to delete a check recording schedule.

Highlighting the box under the Interval heading beside each alarm-in and pressing the  button allows you to change the interval that you want the DVR to run self-diagnostics on Alarm Inputs. You can select from 1 hr. to 30 days or Never.

Highlight the **Storage** tab and the **Storage** setup screen displays.

System Event

Health Check **Storage** Actions

Disk Bad Notify 50%

Disk Almost Full Notify 90%

Disk S.M.A.R.T. 70 °C

Save Cancel

Figure 48 — Storage setup screen.

Highlight the first box beside **Disk S.M.A.R.T.**, and press the \uparrow/\downarrow button. Use the Up and Down arrow buttons to scroll through the numbers. Refer to the hard disk drive manufacturer's documentation for the correct temperature setting. If the temperature of hard disk drive exceeds the defined threshold, the system triggers an alert.

Highlight the second box beside **Disk S.M.A.R.T.**, and press the \uparrow/\downarrow button. Select either °C (Celsius) or °F (Fahrenheit), and press the \uparrow/\downarrow button.

Highlight the **Actions** tab and the **System Event Actions** setup screen displays.

System Event

Health Check **Storage** **Actions**

Event	Alarm-Out	Notify
System	<input type="checkbox"/>	<input type="checkbox"/>
Boot Up	<input type="checkbox"/>	<input type="checkbox"/>
Restart	<input type="checkbox"/>	<input type="checkbox"/>
Shutdown	<input type="checkbox"/>	<input type="checkbox"/>
Panic Record	<input type="checkbox"/>	<input type="checkbox"/>
Check Recording	<input type="checkbox"/>	<input type="checkbox"/>
Check Alarm-In	<input type="checkbox"/>	<input type="checkbox"/>
Disk Almost Full	<input type="checkbox"/>	<input type="checkbox"/>

Save Cancel

Figure 49 — System Event Actions setup screen.

Highlight the box beside **Disk Bad Notify**, and press the \uparrow/\downarrow button. Select percentage level of bad disk sectors at which you want the DVR to trigger an alert. Percentage levels range from 10% to 90%.

Highlight the box beside **Disk Almost Full Notify**, and press the \uparrow/\downarrow button. Select the percentage level of disk usage at which you want the DVR to trigger an alert. Percentage levels range from 80% to 99%.

The DVR can be set to react to system events. System events can activate the Alarm-Out connector, sound the DVR's internal buzzer, and/or notify a number of different devices.

Highlight the **Alarm-Out** box beside the desired event (Check Recording, Check Alarm-In, Disk Almost Full, Disk Full, Disk Bad, Disk Temperature, Disk S.M.A.R.T. or Disk Config Change), and press the \uparrow/\downarrow button. Select between Alarm Output and Beep (DVR's internal buzzer) that you would like to activate and to sound whenever the DVR detects an event.


NOTE: *Alarm-Out* action cannot be set to **System**, **Boot Up**, **Restart**, **Shutdown** and **Panic Record** events.

Highlight the **Notify** box beside the desired event (System, Boot Up, Restart, Shutdown, Panic Record, Check Recording, Check Alarm-In, Disk Almost Full, Disk Full, Disk Bad, Disk Temperature, Disk S.M.A.R.T. or Disk Config Change), and press the \uparrow/\downarrow button. You can toggle the entire list On and Off by highlighting Notification and pressing the \uparrow/\downarrow button. You can toggle the individual items On and Off by highlighting that item and pressing the \uparrow/\downarrow button. Highlight OK and press the \uparrow/\downarrow button to accept your changes.

NOTE: For the Notify action to work, the DVR should be registered in the RAS (Remote Administration System).

Event Status

Highlight Event Status in the Event menu and press the  button. The Event Status setup screen appears.

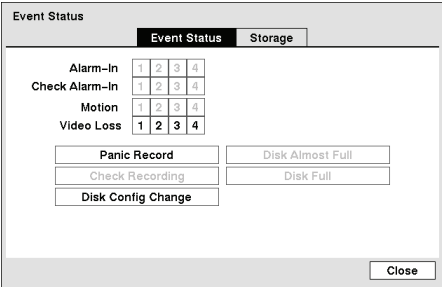

The Event Status screen displays the status of the DVR's systems and inputs. It features two tabs: 'Event Status' (selected) and 'Storage'. Under the 'Event Status' tab, there are four rows of status indicators: 'Alarm-In', 'Check Alarm-In', 'Motion', and 'Video Loss'. Each row has four small square buttons labeled 1, 2, 3, and 4. Below these are four larger rectangular buttons: 'Panic Record', 'Check Recording', 'Disk Config Change', 'Disk Almost Full', and 'Disk Full'. A 'Close' button is located at the bottom right of the screen.

The Event Status screen displays the status of the DVR's systems and inputs. Events will be highlighted, and related channels or events will flicker for five seconds when detected.

Alarm-In, Motion and Video Loss will be highlighted when each event is detected based on the settings you made in the Alarm-In, Motion Detection and Video Loss setup screen on the Event menu.

Figure 50 — Event Status setup screen.

Check Alarm-In and Check Recording will be highlighted when each event is detected based on the settings you made in the System Event setup screen on the Event menu.

Panic Record will be highlighted while the DVR is in the panic recording mode.

Disk Almost Full will be highlighted when the DVR is not in the Recycle mode and the level of disk usage reaches the Disk Almost Full percentage you made in the System Event setup screen on the Event menu. Disk Full will be highlighted when the DVR is not in the Recycle mode and all available storage space has been used. Disk Config Change will be highlighted when the DVR reboots after the hard disk drive has been replaced.

Highlighting the Storage tab will display the hard disk drive status. Refer to the Storage section for details.

Chapter 4 — Operation

NOTE: This chapter assumes your DVR has been installed and configured. If it has not, please refer to Chapters 2 and 3.

The DVR's controls are similar to a VCR. As with a VCR, the main functions are recording and playing back video. However, you have much greater control over recording and playing back video. You can establish recording schedules based on time of day and day of the week. The DVR allows you to search through the recorded video using much more sophisticated tools than those available with VCRs. Additional DVR features that are not available with VCRs are remote control and viewing, and recording video at the same time you are watching previously recorded video.

The front panel controls are described in *Chapter 3 — Configuration*.

Turning on the Power

Once you have installed the DVR following the instructions in *Chapter 2 — Installation*, it is ready to record.

Live Monitoring

As soon as the DVR completes its initialization process, it will begin showing live video on the attached monitor and playing live audio through the attached speaker. The default mode is to display all cameras at once. Pressing any camera button will cause that camera to display full screen. It displays live video and plays live audio until the user enters another mode.

While in the live monitoring mode, pressing the **MENU** button displays the following Live Monitoring menu at the top of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.







- ① Freeze
- ② Sequence
- ③ Camera Menu
- ④ Alarm
- ⑤ Panic
- ⑥ Setup
- ⑦ Search Mode
- ⑧ Login/Logout

Figure 51 — Live Monitoring menu.



NOTE: The Live Monitoring menu also can be displayed by moving the mouse pointer to the top of the screen.


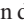
Live Monitoring Menu

Freeze

Selecting  (Freeze) in the Live Monitoring menu will freeze the current image on the screen until you select  again. It is the same as pressing the  (Play/Pause) button on the front panel. While in the Freeze mode, the icon  displays in bottom-left corner if Freeze is selected in the Display setup screen (OSD tab).



Sequence

Selecting  (Sequence) in the Live Monitoring menu causes the cameras to display sequentially. It is the same as pressing and holding the  button on the front panel for three seconds or longer.

Selecting  again in the Live Monitoring menu exits the Sequence mode. While in the Sequence mode, the  icon displays in bottom-left corner if Sequence is selected in the Display setup screen (OSD tab). If the camera is Off or has lost video, that camera will be excluded from the sequence.

Camera Menu

Selecting  (Camera Menu) in the Live Monitoring menu displays the following Camera Menu.


- | | |
|---------------|---|
| Camera Menu | |
| PTZ | ▶ |
| Zoom | ▶ |
| Audio | ▶ |
| Color Control | ▶ |
- **PTZ:** Selecting PTZ and choosing the camera number allows you to control the selected camera as long as it has Pan, Tilt and Zoom capabilities. It is the same as pressing and holding the  button on the front panel for three seconds or longer. Refer to the following *PTZ Mode* section for details.
 - **Zoom:** Selecting Zoom and choosing the camera number zooms the current image of the selected camera on the screen. It is the same as pressing the  button on the front panel. Selecting Zoom again in the Camera Menu again exits the Zoom mode. Refer to the following *Zoom Mode* section for details.
 - **Audio:** Selecting Audio toggles audio output On and Off.
 - **Color Control:** Selecting Color Control and choosing the camera number allows you to control brightness, contrast, hue and saturation for each camera for the selected camera if a user who has Color Control authority logs into the system. It is the same as pressing and holding a camera button for a few seconds.

NOTE: It is important that cameras and monitors are correctly installed and adjusted prior to making any image adjustments using the DVR's controls.

NOTE: Any image adjustments you make will be applied to both the live video on the monitors and the recorded video.

NOTE: The *Camera Menu* also can be displayed by clicking the right mouse button on the screen while in the live monitoring mode.


Alarm

Selecting  (Alarm) in the Live Monitoring menu resets the DVR's outputs including the internal buzzer during an alarm. It is the same as pressing any button on the front panel when the alarm is activated.


Panic

Selecting  (Panic) in the Live Monitoring menu starts panic recording of all cameras, and displays  on the screen. Selecting  again stops panic recording. It is the same as pressing the **PANIC** button on the front panel.



Setup

Selecting  (Setup) in the Live Monitoring menu enters the Main Setup screen. Refer to *Chapter 3 – Configuration* for detailed descriptions of system setup.



Search Mode

Selecting  (Search Mode) in the Live Monitoring menu exits the live monitoring mode and enters the search mode. It is the same as pressing the **SEARCH** button on the front panel.

Login/Logout


Selecting  (Login) in the Live Monitoring menu accesses the Login screen, and you will be asked to select a User and enter the password to log into the system. Selecting  (Logout) in the Live Monitoring menu displays the Logout screen asking you to confirm whether or not you want to log out the current user.

Zoom Mode

You can enlarge an area of the video by selecting **Zoom** from the Camera Menu in the Live Monitoring menu or pressing the **ZOOM** button on the front panel. For a few seconds after selecting **Zoom** from the Camera Menu or pressing the **ZOOM** button, a rectangle displays on the screen. A rectangle shows the area that will be enlarged. You can move the rectangle around using the arrow buttons. Pressing the  (Play/Pause) button in the Zoom mode enlarges the area in rectangle. Exit the Zoom mode by selecting **Zoom** again from the Camera Menu or pressing the **ZOOM** button again. While in the Zoom mode, the icon  displays if **Zoom** is selected in the Display setup screen (OSD tab).

PTZ Mode

If a user who has **PTZ Control** authority logs into the system, the user can control PTZ cameras. The DVR will control cameras with Pan, Tilt and Zoom capabilities. Select **PTZ** from the Camera Menu in the Live Monitoring menu or press and hold the **PTZ** button on the front panel for three seconds or longer to display the PTZ camera menu and enter the PTZ mode. Select **PTZ** again from the Camera Menu or press and hold the **PTZ** button for three seconds or longer again to exit the PTZ mode.

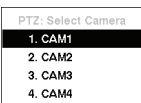


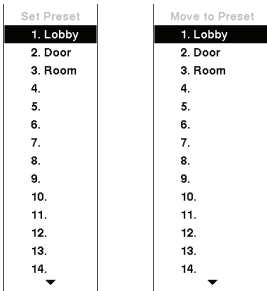
Select the PTZ camera you wish to control. The icon  flickers on the PTZ camera screen. You can control the camera using front panel control buttons, by setting up presets or by selecting the expanded PTZ features. To use the front panel buttons, press the Left and Right arrow buttons to pan left and right. Press the Up and Down arrow buttons to tilt the camera up and down. Press the camera button 1 to zoom in, and press the button 2 to zoom out. You can use the button 3 and button 4 to focus the image.

Figure 52 – PTZ Select Camera menu.




You can save camera position settings as “presets” so that you can go directly to desired views.

Once you have the camera at the desired settings, press the **SEARCH** button on the front panel. Select **Set Preset** from the Move to Preset dialog box, and the PTZ Preset dialog box will appear. Select the number you want to assign to the preset and press the (Play/Pause) button. Use the virtual keyboard to enter the preset name.

Press the **SEARCH** button on the front panel to load the PTZ preset, and the **Move to Preset** dialog box will appear. Select the desired preset and press the button to load the preset.

< Set Preset > < Move to Preset >

Figure 53 — PTZ Preset screen.

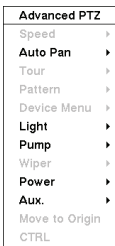

While in the PTZ mode, pressing the **MENU** button and selecting (Advanced PTZ) in the menu displaying at the top of the screen displays the Advanced PTZ menu.

Set the feature you wish to control by selecting it from the menu. Refer to the camera manufacturer’s instructions for the proper settings. Depending on the camera specifications, some features may not be supported.

You can use a mouse for convenient PTZ control. Position the mouse pointer at the bottom of the screen, and the following PTZ toolbar will display.



Clicking on the left side exits the toolbar. If you want to display the toolbar again, position the mouse pointer at the bottom of the screen. Change the toolbar location by clicking the empty space on the left side of the toolbar and drag it to where you want it located on the screen. Use the arrow buttons on the toolbar to pan or tilt the camera in the direction you want. The other controls on the toolbar perform as described below:

	Zoom In / Out		Focus Near / Far
	Iris Open / Close		Set / Load Preset

Using a Mouse


You can use a mouse instead of the front panel buttons to perform many of the DVR functions. In the Live Monitoring mode or Search mode, moving the mouse pointer to the left edge of the screen displays the following Mouse Display menu.




- ① Full Screen
- ② 2x2
- ③ Previous Camera
- ④ Next Camera
- ⑤ OSD

Figure 54 — Mouse Display menu.

Full Screen

Selecting  (Full Screen) in the Mouse Display menu and choosing the camera number button displays the selected camera full screen. It is the same as pressing the individual camera buttons on the front panel.

2x2

Selecting  (2x2) in the Mouse Display menu displays the cameras in the quad (2x2) screen mode. It is the same as pressing the individual camera buttons or the **LAYOUT** button on the remote control in the full screen mode.

Previous Camera, Next Camera

Selecting  or  (Previous Camera or Next Camera) in the Mouse Display menu moves to the previous or next camera.

OSD

Selecting  (OSD) in the Mouse Display menu toggles OSD On and Off.

Recording Video

Once you have installed the DVR following the instructions in *Chapter 2 — Installation*, it is ready to record. The DVR will start recording based on the settings you made in the **Record** setup screen. See *Chapter 3 — Configuration*.

Recycle On or Recycle Off. The factory default is **Recycle On**. It does this by recording over the oldest video once the hard disk is full. Setting the DVR to **Recycle Off** causes it to stop recording once the hard disk is full.

Pressing the **PANIC** button starts panic recording of all cameras, and pressing the button again stops panic recording. If you set the Panic Recording Duration in the Record Screen, panic recording will stop automatically according to the preset duration as long as the **PANIC** button is not pressed.

NOTE: When the DVR is not in the Recycle mode and all available storage space has been used, panic recording will not operate.

Although you will be able to record without changing the unit from its original factory settings, you will want to take advantages of the DVR's many tools. See *Chapter 3 — Configuration* for detailed descriptions of the recording mode options.

Recording Audio




If the DVR was set up to record audio, it will record audio from the input when video is recording. The DVR will not record audio when the recording speed is set to less than 1 ips.


NOTE: Make certain you comply with all local and federal laws and regulations when recording audio.


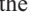

Playing Recorded Video

If a user who has Search authority logs into the system, the user can view recorded image. Once video has been recorded, you can view it by pressing the **SEARCH** button. When playing video for the first time, the DVR will display the most recent image. When playing video subsequent times, the DVR will start playing video from the last recalled image. Recorded audio will be played when the DVR displays a camera with recorded audio in full screen mode.

Camera Buttons: Pressing the individual camera buttons will cause the selected camera to display full screen, and pressing the button again changes the display format to the quad (2x2) mode.

Arrow Buttons: Pressing the  button plays video backward at high speed. Pressing the button again toggles the playback speed from ,  and . Pressing the  button plays video forward at high speed. Pressing the button again toggles the playback speed from ,  and . When in the pause mode, pressing the  button moves to the next image and pressing the  button moves to the previous image.

Pause Button: Pressing the  button pauses playing video.

Search Button: Pressing the **SEARCH** button enters the search mode, and pressing the button again exits the search mode. When entering the search mode, video is paused. Pressing the  button plays back video at regular speed. The screen displays  when the DVR is in the Pause mode and the screen displays  when the DVR is playing back video.

Zoom Button: Pressing the **ZOOM** button zooms in the current image on the screen. It is the same as selecting Zoom from the Camera Menu in the Search menu.

You can use a mouse for convenient playback control. Position the mouse pointer on the playback screen, and the following playback toolbar will display.



Clicking **X** on the left side exits the toolbar. If you want to display the toolbar again, position the mouse pointer on the screen. Change the toolbar location by clicking the empty space on the right side of the toolbar and drag it to where you want it located on the screen. The individual controls on the toolbar perform the following functions as described below:

- ⏮ Go to the first image
- ⏪ Fast backward play
- ⏩ Go to the previous image
- ⏸ Play/Pause
- ⏭ Go to the next image
- ⏴ Fast forward play
- ⏮ Go to the last image

Searching Video

While in the search mode, pressing the **MENU** button displays the following Search menu at the top of the screen. Pressing the **MENU** button again hides the menu. You can navigate through menus and items by pressing the arrow buttons.



- ① Search
- ② Go To
- ③ Export
- ④ Camera Menu
- ⑤ Alarm
- ⑥ Panic
- ⑦ Data Source
- ⑧ Exit

Figure 55 — Search menu.

NOTE: The Search menu also can be displayed by moving the mouse pointer to the top of the screen.

Search Menu

Search


Selecting **Q** (Search) in the Search menu displays the following Search menu. See the following *Event Log Search* and *Calendar Search* sections for details.

Search
Event Log Search
Calendar Search


- Event Log Search: Selecting Event Log Search selects video from the event log.
- Calendar Search: Selecting Calendar Search selects using a calendar.

Go To

Selecting **T** (Go To) in the Search menu displays the following GO TO menu.

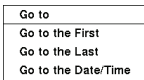

- **Go to the First:** Selecting Go to the First displays the first recorded image.
- **Go to the Last:** Selecting Go to the Last displays the last recorded image.
- **Go to the Date/Time:** Selecting Go to the Date/Time displays the Go to the Date/Time screen.

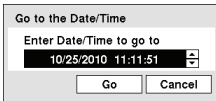


Move the cursor over the date and time and press the (Play/Pause) button. You can use the Left and Right arrow buttons to highlight the year, month, day, hours, minutes and seconds. Use the Up and Down arrow buttons to change to the date and time you want to search for video.

Once you have set the date and time you want, press the button. Then highlight Go and press the button. The selected date and time will display. (If no video was recorded during the selected time, a message appears alerting you that no image was recorded at that time.) The button and arrow buttons can now be used to review the surrounding video.

Export


Selecting (Export) in the Search menu displays the following Export menu. See the following *Clip Copy* section for details.

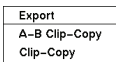

- **A-B Clip-Copy:** Selecting A-B Clip-Copy will set the starting point of the video to be clip copied, and the icon displays at the bottom-left corner of the screen. Selecting A-B Clip-Copy again will set the ending point of the video to be clip copied and displays the Clip-Copy screen.
- **Clip-Copy:** Select Clip-Copy, and the Clip-Copy screen appears to allow clip copy setup.

Camera Menu

Selecting (Camera Menu) in the Search menu displays the following Camera Menu.

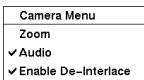


- **Zoom:** Selecting Zoom and choosing the camera number zooms the current playback image of the selected camera on the screen. It is the same as pressing the button on the front panel. Selecting Zoom again exits the Zoom mode.
- **Audio:** Selecting Audio toggles audio playback On and Off. Recorded audio will be played when the DVR displays a camera with recorded audio in full screen mode.
- **Enable De-Interlace:** Selecting Enable De-Interlace turns the de-interlace filters on.



NOTE: The video signal has a time difference of 1/60 second (1/50 second for PAL) between odd and even fields because it is composed of 60 interlaced fields per second (50 fields for PAL). When recording video with Very High (D1) resolution, video is made up of frame units combining two fields – one odd field and one even field. This can cause horizontal scan lines or flashes in areas with motion because of the time difference between the two fields. Turning on the de-interlace filter provides clearer video by eliminating these horizontal scan lines and flashes.

NOTE: The *Camera Menu* also can be displayed by clicking the right mouse button on the screen while in the search mode.


Alarm

Selecting  (Alarm) in the Search menu resets the DVR's outputs including the internal buzzer during an alarm. It is the same as pressing any button on the front panel when the alarm is activated.


Panic

Selecting  (Panic) in the Search menu starts panic recording of all cameras, and selecting  again stops panic recording. It is the same as pressing the **PANIC** button on the front panel.

Data Source

Selecting  (Data Source) in the Search menu allows you to select the data source to be searched. Selecting **Record** searches recorded data on primary storage installed in the DVR, and selecting **Other** searches recorded data on storage used for another DVR then installed in this DVR.

Exit

Selecting  (Exit) in the Search menu exits the search mode and enters the live monitoring mode.



Event Log Search

Event Log Search		
Time	Type	Title
10/25/2010 11:12:16	Motion 2	CAM 2
10/25/2010 11:12:16	Motion 3	CAM 3
10/25/2010 11:12:16	Motion 4	CAM 4
10/25/2010 11:12:16	Motion 1	CAM 1
10/25/2010 11:12:16	Motion 2	CAM 2
10/25/2010 11:12:16	Motion 3	CAM 3
10/25/2010 11:12:16	Motion 4	CAM 4
10/25/2010 11:12:16	Motion 1	CAM 1
10/25/2010 11:12:16	Motion 2	CAM 2
10/25/2010 11:12:16	Motion 3	CAM 3
Option... None		▲ ▼
Close		

The DVR maintains a log of each time the Alarm Input port is activated. The **Event Log Search** screen displays this list. Use the arrow buttons to highlight the event for which you would like to see video.

There is no determined user authority to display the Event Log Search screen, however, the event video will not be played unless a user with Search authority logs into the system.

Figure 56 — Event Log Search screen.


Pressing the  (Play/Pause) button will extract the event video and display the first image of the event. Pressing the  button will start playing the “event” video segment. Pressing **SEARCH** button returns to live monitoring.


NOTE: It is possible that no recorded image displays on the current screen. Change the screen mode to 2x2, and you will be able to easily see the cameras that have recorded video during target time.


You can also narrow your event search by selecting the Option... button and setting up the new search condition.


Event Log Search Option			
From	<input checked="" type="checkbox"/> First	10/20/2010 18:15:05	
To	<input checked="" type="checkbox"/> Last	10/20/2010 18:15:05	
<input checked="" type="checkbox"/> Check Time Overlap			
Alarm-In	1~4		<input type="checkbox"/> System Event <input checked="" type="checkbox"/> Panic Record <input checked="" type="checkbox"/> Check Recording <input checked="" type="checkbox"/> Check Alarm-In <input checked="" type="checkbox"/> Disk Almost Full <input checked="" type="checkbox"/> Disk Bad
Motion	1~4		
Video Loss	1~4		
Record Channels	1~4		
			<input type="button" value="Search"/> <input type="button" value="Cancel"/>


You can search video from the first to last recorded images, or you can set the start and stop times and dates.


Highlight the box beside **From** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the first recorded image.


Highlight the box beside **To** and press the  button to toggle between On and Off. When set to Off, you can enter a specific Date and Time. When set to On, the search will be from the last recorded image.

Highlight the box beside **Check Time Overlap** and press the  button. It toggles between On and Off. You will only be able to turn the Check Time Overlap on or off if a user-defined date and time is set to From and To. If the DVR's date and time have been reset, it is possible for the DVR to have more than one overlapping start and stop time. When set to On, you will be asked to select one of the overlapping start and stop time. When set to Off, the DVR will display search results from all start times to all stop times.

Highlight the box beside **Alarm-In** and press the  button. You can select the alarm inputs that you want to include in your search.


Highlight the box beside **Motion** and press the  button. You can select the cameras for which you want any reports of motion detection.

Highlight the box beside **Video Loss** and press the  button. You can select the cameras for which you want any reports of lost video.

Highlight the box beside **Record Channels** and press the  button. You can select the cameras that you want to search for any reports of event recorded data. The DVR will display the events (not the camera channels) that occurred and that also are recorded on the camera channel that you selected. If you do not select a camera channel in this field, the DVR will search events that are not associated with cameras.

You can also toggle On and Off self-diagnostic events as part of your search. The choices are:

- Panic Record
- Check Recording
- Check Alarm-In
- Disk Almost Full
- Disk Bad
- Disk Temperature
- Disk S.M.A.R.T.
- Disk Config Change

Once you set your desired search conditions, highlight **Search** and press the  button to display the search results in the Event Log Search screen. Selecting **Cancel** exits the screen without saving the changes.

Calendar Search

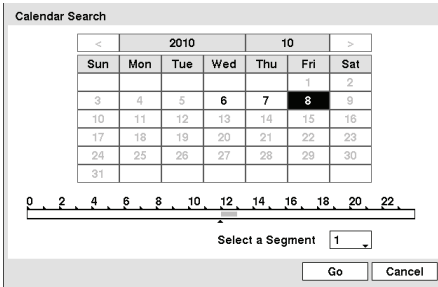



Figure 57 — Calendar Search.


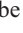
Days with recorded video display on the calendar with white numbers. You can highlight the days with recorded video by using the arrow buttons. Once you have highlighted a day, press the  (Play/Pause) button to select it.

A time bar displays at the bottom of the calendar. Hours in which video was recorded will be highlighted with blue. You can use the Up and Down arrow buttons to highlight the time bar. Once the time bar is highlighted, you can select the time by using the Left and Right arrow buttons.

NOTE: The time bar is in one-hour segments. If a segment is highlighted, it means that some video was recorded during that hour. However, it does NOT mean video was recorded for the entire hour.

If the DVR's time and date have been reset to a time that is earlier than some recorded video, it is possible for the DVR to have more than one video stream in the same time range. Move to **Select a Segment**, and select the video stream you want to search. Refer to the *Appendix – Time Overlap* for further information on searching time-overlapped video streams.


NOTE: The lower number of the Segment indicates the latest recorded video.

Once you have set the date and time you want to search, highlight **Go** and press the  button. The selected date and time will display. The  button and arrow buttons can now be used to review the surrounding video.

NOTE: It is possible that no recorded image displays on the current screen. Change the screen mode to 2x2, and you will be able to easily see the cameras that have recorded video during target time.

Clip-Copy

Video clips can be copied on an external USB hard disk or flash drive. The copied video clips can be viewed on computers running Microsoft Windows 98, ME, 2000, XP or Vista. Refer to the *Appendix – USB Hard Disk Drive Preparation* for information on preparing the external drive for clip copy.

Selecting **A-B Clip-Copy** from the **Export** menu in the **Search** menu or pressing the **BACK UP** button on the remote control during playback will set the starting point of the video to be clip copied, and the  icon displays at the bottom-left corner of the screen. Selecting **A-B Clip-Copy** again from the **Export** menu in the **Search** menu or pressing the **BACK UP** button again will set the ending point of the video to be clip copied by displaying the **Clip-Copy** screen.

Select **Clip-Copy** from the **Export** menu in the **Search** menu, press the **BACK UP** button on the remote control while in the **Live Monitoring** mode or press and hold the **BACK UP** button for more than three seconds while in the **Search** mode, and the **Clip-Copy** screen appears to allow clip copy setup.

Figure 58 — Clip-Copy screen.

Highlight the box beside **From** and press the (Play/Pause) button to set a starting Date and Time.

Highlight the box beside **To** and press the button to set an ending Date and Time.

Highlight the box beside **Channels** and press the button. You can select the cameras that you would like to include in your video clip.

Highlight the box beside **Password** and press the button. A virtual keyboard appears allowing you to enter the password for reviewing the video clips.

Highlight the box beside **Dest.** and press the button. You can select the storage device on which you would like to record the video clip.

CAUTION: The USB device for clip copy must be FAT 16 or FAT32 format.

The DVR automatically assigns a file name to the video clip. However, you can give the video clip file a different name. Highlight the box beside **File Name** and press the button. A virtual keyboard appears. Enter a file name for the video you are backing up and select **Close**. The DVR will automatically add the camera number (for example “01”) and “.exe” to the file name.

NOTE: When naming a file, you cannot use the following characters: \, /, :, *, ?, “, <, >, |.

Once you have given the video clip a file name, highlight the **Start** button and press the button. The confirmation screen displaying data size will appear. When the storage device does not have enough space, the DVR will ask if you want to copy as much of the video clip as possible in the available space.

Highlight the **Continue** button and press the button to continue clip copy.

Once the clip copy starts, you can cancel it by selecting **Cancel** or hide the screen by selecting **Close**. When selecting **Close**, Clip Copy continues and a confirmation screen will display when complete.

NOTE: The file size for clip copy is limited to 30GB. When copying video clips larger than 2GB, the video clips will be save in units of 2GB. For example, 3 individual 2GB files will be created when saving a 6GB video clip. However, the file size for the One-Touch Clip Copy is limited to 2GB.

You can use other functions on the DVR while video is being backed up. To do this, highlight the **Close** button and press the button. You can return to the Clip-Copy screen at any time to check the progress.

You do not need to install any special software on your personal computer to review the video clips. Refer to the RAS manual for instructions on how to review video clips you have copied.

NOTE: During Clip Copy, you cannot shut the system down, clear data on the storage device, or format the storage device.

CAUTION: Do NOT disconnect the USB cable or the power from the external drive while copying video clips. If the external drive is shut down or the USB cable is disconnected while copying video clips, THE DVR SYSTEM MAY NOT WORK NORMALLY OR THE EXTERNAL DRIVE COULD BE DAMAGED, and you will get an error message the next time you try to copy video clips. You will need to power down the DVR and restart it to get rid of the error message. Once the file system of the USB hard disk drive has been corrupted, this error message cannot be dismissed. Even after restarting the DVR it may automatically restart while preparing to clip copy. You must recover the file system using the recovery program, or you must reformat the hard disk drive.

Appendix

USB Hard Disk Drive Preparation

Preparing the USB hard disk drive in Windows 2000

NOTE: Preparing a USB hard disk drive under Windows XP, Windows Vista and Windows 7 is almost identical to Windows 2000.

1. Connect the USB hard disk drive to your computer using the USB Cable.
2. Turn on your computer.
3. The USB device icon should display on the Taskbar.
4. If the USB hard disk drive is partitioned or has data, it will show up in *My Computer* as a hard disk drive icon. Check the file system by right clicking on the icon and checking under *Properties > General > File System*. If the file system is NOT FAT32 format, format the USB hard disk drive using the FAT32 format.
5. If the USB hard disk drive is not partitioned, go to *Administrative Tools* in *Control Panel* and launch *Computer Management*. Open *Disk Management* in *Storage* and right click an unallocated region of the USB hard disk drive. Then, click *Create Partition*.
6. In the *Create Partition* wizard, click *Next* then *Primary Partition*, and follow the instructions on the screen. Make sure that the FAT32 is selected for the file system.

NOTE: The partition size should be less than 32GB because of Microsoft limitations.

After formatting is complete, the USB hard disk drive will be added to *My Computer*.

7. Connect the USB hard disk drive to the DVR.

Preparing the USB hard disk drive in Windows 98


NOTE: Preparing a USB hard disk drive under Windows ME is almost identical to Windows 98.

1. Connect the USB hard disk drive to your computer using the USB Cable.
2. Turn on your computer. The *Add New Hardware* wizard window will appear.
3. Install the device driver for the USB backup device following the instructions provided with your USB hard disk drive.
4. If the USB hard disk drive is partitioned or contains data, it will show up in *My Computer* as a hard disk drive icon. Check the file system in *Properties > General > File System*. If the file system is NOT FAT32 format, format the USB hard disk drive with FAT32 format.
5. Run the FDISK utility by clicking *Start* then *RUN*. Type "fdisk" and click OK.
6. When the MS-DOS command prompt appears, type "Y" and hit the enter key.
7. In the FDISK Option menu, choose "5. Change current fixed disk drive."
8. Choose the appropriate letter corresponding to the USB hard disk drive.
9. In the FDISK Option menu, choose "1. Create DOS partition or Logical DOS Drive."
10. In the Create DOS Partition or Logical DOS Drive menu, choose "1. Create Primary DOS Partition." And Type "Y" to use all available space and hit the enter key. Hit ESC to exit the screen after the USB hard disk drive partition is created.
11. Restart your computer and verify the newly created drive is in *My Computer*.

12. Right click the newly created hard disk drive icon and select “*Format*”.
13. In the Format Screen, select “*Full*” as the “*Format type*” and click “*Start*”.
14. After formatting is complete, connect the USB hard disk drive to the DVR.

Time Overlap

If the DVR’s time and date have been reset to a time that is earlier than the existing recorded video, it is possible for the DVR to have more than one video stream in the same time range. In this case, you can search overlapping video streams individually by selecting a specific segment. For example, when the DVR has recorded video from one to five o’clock and the user changes the time backward from five to three o’clock and then continues recording until six o’clock, there will be two video streams and segments from three to five o’clock.

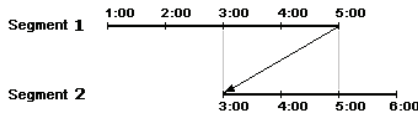

You can search overlapping video streams by selecting a specific time or time range. If you want to search recorded video at four o’clock during the overlapping time range using a search menu such as *Go to the Date/Time*, select the segment you want to search.



If you want to search recorded video from four to five o’clock during the overlapping time range using a search menu such as *Event Log Search* or *Calendar Search*, it is possible for the DVR to have two overlapping start and stop times. You will be asked to select one of the overlapping start and stop times from the search time ranges as follows:

- From four o’clock of the first segment to five o’clock of the first segment
- From four o’clock of the first segment to five o’clock of the second segment
- From four o’clock of the second segment to five o’clock of the second segment



WebGuard

WebGuard allows you to access a remote DVR, monitor live video images and search recorded video using Internet Explorer web browser anytime from virtually anywhere.

Computer system requirements for using the WebGuard program are:


- Operating System: Microsoft® Windows® XP x86 (32 Bit) (Service Pack 3), Microsoft® Windows® Vista x86 (32 Bit) (Service Pack 1) or Microsoft® Windows® 7 x86 (32 Bit)
- CPU: Intel Pentium III (Celeron) 600MHz or faster
- RAM: 128MB or higher
- VGA: 8MB or higher (1024x768, 24bpp or higher)
- Internet Explorer: Version 6.0 or later

Start Internet Explorer on your local PC. You can run the WebGuard program by entering the following information in the address field.

- “http://IP address:port number” (The DVR IP address and the WebGuard port number (default: 12088) set in the Network setup screen (WebGuard tab))
- Or, “http://DVRNS server address/DVR name” (The DVRNS server address and the DVR name registered on the DVRNS server)
- Or, “http://www.dvronline.net” (Entering the DVR IP address or the DVR name will be required when logging in)

NOTE: You will need to get the appropriate IP address for the DVR you want to connect to and the WebGuard port number from your network administrator.

NOTE: WebGuard only works with Microsoft Internet Explorer and will NOT work with other browsers.

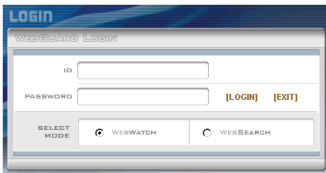

Select between the WEBWATCH (Web monitoring) and WEBSEARCH (Web search) modes. Entering ID and PASSWORD and clicking the [LOGIN] button logs in using the selected mode.

You will need to enter the DVR IP address in the DVR ADDRESS field when running the WebGuard program by entering http://www.dvronline.net. Selecting the Use DVRNS option allows you to enter the DVR name registered on the DVRNS server instead of the IP address. You must enter the DVRNS server address and port number in the SETUP setting when selecting the Use DVRNS option.

NOTE: Do NOT close the LOGIN window during the WebGuard operation, otherwise, it will cause a script error when switching between Web monitoring and Web search modes and running the WebGuard program again will be required.

NOTE: When running the updated WebGuard for the first time, Internet Explorer might occasionally load the information of the previous version. In this case, delete the temporary internet files by selecting Tools → Internet Options → General tab, and then run WebGuard again.

NOTE: There might be a problem that the bottom of WebGuard page is cropped due to the address or status bars in Microsoft Internet Explorer 7.0. In this situation, it is recommended that websites open windows without address or status bars by changing the internet setting. (Go to the Tools → Internet Options → Security tab → Click the Custom level... button → Select *Enable* for the *Allow websites to open windows without address or status bars* option)

NOTE: When running WebGuard in the Microsoft Windows Vista or higher operating system, it is recommended to start Internet Explorer with elevated administrator permissions. Click the right mouse button on the Internet Explorer icon and select the *Run as administrator* option from the context menu. Otherwise, some functions of WebGuard might be limited.

NOTE: There might be a problem with screen display or screen update due to low image transmission speed when using the Microsoft Windows Vista or higher operating system. In this situation, it is recommended you disable the Auto Tuning capability of your computer.

Run the Command Prompt with elevated administrator permissions (Go to the Start Menu → Accessories → *Command Prompt* → Click the right mouse button and select the *Run as administrator* option). Then enter “netsh int tcp set global autotuninglevel=disable” and hit the enter key. Restart your computer to apply the changes.




If you want to enable the Auto Tuning capability again, enter “netsh int tcp set global autotuninglevel=normal” after running the Command Prompt with elevated administrator permissions. Restart your computer to apply the changes.


Web Monitoring Mode



WebWatch is a remote web monitoring program that allows you to monitor live video transmitted in real-time from the remote DVR.








- ① Click the [Logout] icon to log out the WebGuard program.
- ② Click the [Search] icon to access to the web search mode.
- ③ Position the mouse pointer on the WebWatch logo to see the version of the WebGuard program.
- ④ The DVR information window displays the login information of WebGuard.
- ⑤ Click the screen format to select the desired display mode. When changing the screen format, the selected camera on the current screen will be located in the first cell of the new layout.

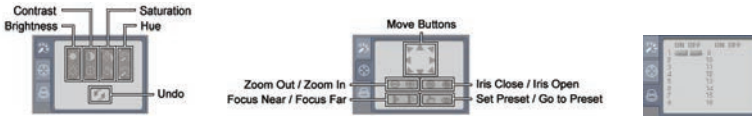- ⑥ Click the camera button to select the camera to be viewed.
- ⑦ Click the  to adjust the brightness, contrast, saturation and hue of monitoring image.
- ⑧ Click the  to control pan, tilt and zoom of the camera from a remote site.
- ⑨ Click the  to control alarm out devices at the remote site.




- ⑩ Click the  to set up the image drawing mode and OSD display. You can adjust the display speed by changing the image drawing mode, and select OSD information to be displayed on the screen.
- ⑪ Click the  to save the current image as a bitmap or JPEG file format.
- ⑫ The event status window at the bottom displays a list of events that were detected from the remote site.
- ⑬ Selecting a camera on the screen and clicking the right mouse button displays the text menu screen.

Change Camera Title	
Enable Audio	
Aspect Ratio	▶
Deinterlacing	▶
Anti-Aliasing Screen	

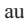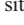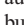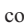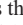- **Change Camera Title:** Changes the camera name.
- **Enable Audio:** Enables audio communication with the remote site. When the audio control panel displays, click the  to send audio to the connected remote site and click the button again to stop sending audio. Click the  to monitor live audio from the connected remote site through the attached speaker and click the button again stop monitoring live audio. Clicking both  and  allows two-way communication. Clicking the  disables audio communication.

- **Aspect Ratio:** Changes the image aspect ratio.
- **Deinterlacing:** Using a deinterlace filter for interlaced video enhances image display quality by eliminating horizontal scan lines and noise in areas with motion.
- **Anti-Aliasing Screen:** Enhances image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTE: A camera name change in the Web Watch mode does not affect the camera name set up on the remote site. Leaving the Camera Title blank causes the camera name set up on the remote site to display.

NOTE: The  icon will display on each camera screen when audio communication is available between the WebGuard system and a DVR.

Web Search Mode

WebSearch is a remote web search program that allows you to search recorded video on the remote DVR.

NOTE: The remote site connection in the Web Search mode will automatically be disconnected if there is no activity for 30 minutes.








- ① Click the [] to log out the WebGuard program.
- ② Click the [] to access to the web monitoring mode.
- ③ Position the mouse pointer on the WebSearch logo to see the version of the WebGuard program.
- ④ The DVR information window displays the time information of recorded data on the remote DVR and login information of WebGuard.
- ⑤ Click the [] to blur, sharpen, equalize and interpolate playback images. Click the [] to zoom out or zoom in the recorded image. Click the [] to adjust the brightness of the recorded images.

NOTE: Image processing works only in the pause mode.

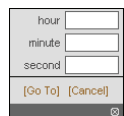

- ⑥ The playback function buttons include fast backward, pause, play, fast forward, go to the first image, go to the previous image, go to the next image, and go to the last image.
- ⑦ Click the screen format to select the desired display mode.
- ⑧ Click the [] to enter the time-lapse search mode which allows you to search for recorded data by time and then play back images found within the time parameters. The Timetable window located at the bottom displays the time information for the image of the date selected on the calendar. If more than one video stream in the same time range, you can select the video stream you want to search. Clicking a specific time displays the image recorded at that time on the screen. Selecting the [] allows you to display an image from a specific time.
- ⑨ Click the [] to enter the event search mode which allows you to search for event log entries using specific conditions and play back the images associated with those event entries.
- ⑩ Click the [] to set up the image drawing mode and OSD display. You can change the display speed by adjusting the image drawing mode, and select OSD information to display on the screen.








- ⑪ Click the  to save any video clip of recorded data as an executable file, or click the  to save the current image in a bitmap or JPEG file format.
- ⑫ Click the  to print the current image on a printer connected to your computer.
- ⑬ Click the  to reload the recording data.
- ⑭ The timetable displays recorded data of the selected camera by time (in hour segments).
- ⑮ Selecting a camera on the screen and clicking the right mouse button displays the text menu screen.

Change Camera Title	
Enable Audio	
Aspect Ratio	▶
Deinterlacing	▶
Anti-Aliasing Screen	

- **Change Camera Title:** Changes the camera name.
- **Enable Audio:** Plays audio while playing back recorded video that has recorded audio. (Single-Screen Layout Only)
- **Aspect Ratio:** Changes the image aspect ratio.
- **Deinterlacing:** Using a deinterlace filter for interlaced video enhances image display quality by eliminating horizontal scan lines and noise in areas with motion.
- **Anti-Aliasing Screen:** Enhances image display quality by eliminating stair stepping (aliasing) effects in the enlarged image.

NOTE: A camera name change in the Web Search mode does not affect the camera name set up on the remote site. Leaving the Camera Title blank causes the camera name set up on the remote site to display.

Troubleshooting

Problem	Possible Solution
No Power	<ul style="list-style-type: none"> • Check power cord connections. • Confirm that there is power at the outlet.
No Live Video	<ul style="list-style-type: none"> • Check camera video cable and connections. • Check monitor video cable and connections. • Confirm that the camera has power. • Check camera lens settings.
Live Video Very Bright	If a cable is attached to the “Loop” connector, make certain it is connected to a properly terminated device.
DVR has stopped recording	If hard disk drive is full, you will either need to delete video or set the DVR to the Overwrite Mode.
The icon  displays, however, the DVR is not recording.	When the DVR is in the Pre-Event recording mode, the yellow  and  display when there is no event, and the DVR is not recording. The red  and  display when any event occurs and the DVR starts recording.


System Log Notices

Boot Up	Remote Setup Change	Format Disk
Shutdown	Remote Setup Fail	Disk Full
Restart	Setup Imported	Disk Config Change
Upgrade	Setup Import Failure	Auto Deletion
Upgrade Fail	Setup Exported	Search Begin
Time Change	Setup Export Failure	Search End
Time Zone Change	Setup Export Cancel	Clip-Copy Begin
Disk Bad	Schedule On	Clip-Copy End
Login	Schedule Off	Clip-Copy Cancel
Logout	Panic On	Clip-Copy Fail
Setup Begin	Panic Off	Callback Fail
Setup End	Clear All Data	

Error Code Notices

System Upgrade Related		Clip Copy Related	
No.	Description	No.	Description
0	Unknown error.	0	Unknown error.
1	File version error.	1	Device error.
2	Operating system version error.	2	Mounting failed.
3	Software version error.	3	No media.
4	Kernel version error.	4	Invalid media.
100	Upgrade device mounting failed.	5	File already existed.
101	Package is not found.	6	Not enough space.
102	Extracting package failed.	7	Creating temporary file failed.
103	LILO failed.	8	Opening disk failed.
104	Rebooting failed.	9	Formatting disk failed.
105	Invalid package.	10	Database has been changed.
300	Remote connection failed.	11	Appending failed.
301	Remote network error.	12	Bad sector.
302	Remote upgrade is not authorized.	13	No executable file.
303	Saving remote package failed.	14	Opening executable file failed.
304	Remote upgrade is cancelled by the user.	15	Writing executable file failed.
400	USB device mounting failed.	16	Creating image failed.
401	Reading upgrade package on the USB device failed.		
402	Copying upgrade package on the USB device failed.		
500	System is busy clip copying.		

Map of Screens

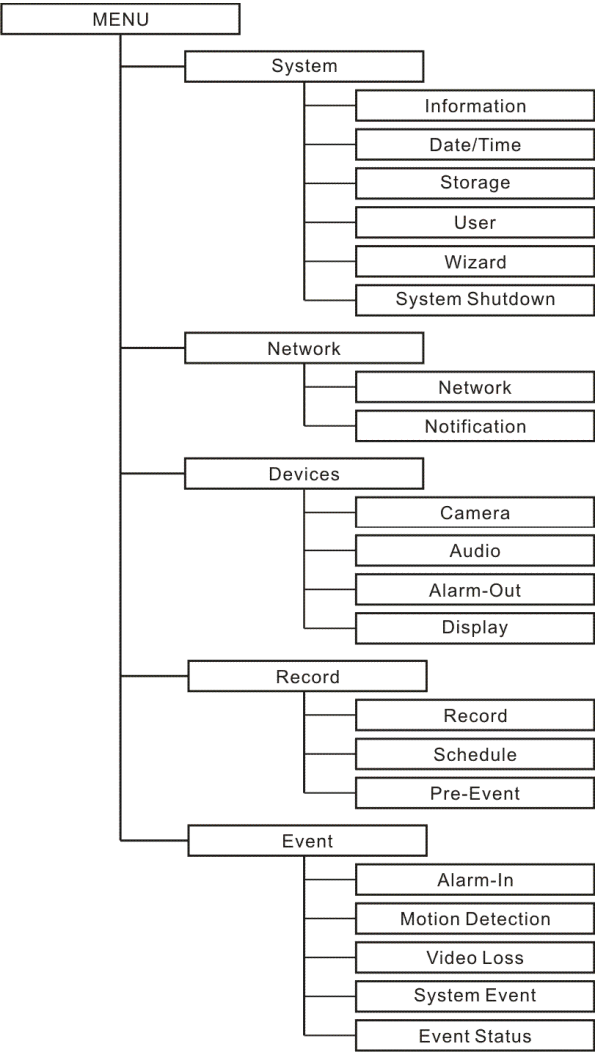



Specifications

VIDEO	
Signal Format	NTSC or PAL (Auto Detect)
Video Input	Composite: 4 looping inputs, 1 Vp-p, auto-terminating, 75 Ohms
Monitor Outputs	Composite: 1 BNC, 1 Vp-p, 75 Ohms VGA: 1 (Auto Detect)
Video Resolution	Composite: 720x480 (NTSC), 720x576 (PAL) VGA: 720x480@60Hz (NTSC), 720x576@75Hz (PAL)
Record Speed (images per second)	Real-time: 120ips (NTSC), 100ips (PAL) @ 2CIF
Playback Speed (images per second)	Full Duplex: 120ips (NTSC), 100ips (PAL) @ 2CIF

INPUTS/OUTPUTS	
Alarm Input	4 TTL, programmable as NC or NO, 4.3V threshold
Alarm Output	1 relay output, terminal blocks, 1A@30VDC
Internal Buzzer	80dB at 10cm
Network Connectivity	10/100 Mbps Ethernet (RJ-45)
Audio Input	RCA Input: 1, Line In
Audio Output	RCA Output: 1, Line Out

CONNECTORS	
Video Input	Composite: 4 BNC
Video Loop	Composite: 4 BNC (Auto Terminating)
Monitor Output	Composite: 1 BNC VGA: 1 VGA
Audio In	1 RCA connector
Audio Out	1 RCA connector
Alarm Input/Output	Terminal blocks
Ethernet Port	RJ-45
RS232 Serial Port	Two-connector terminal block
RS485 Serial Port	Two-connector terminal block
USB Port	2 (USB 2.0)
IR Port	1 Remote Control

STORAGE	
Primary Storage	SATA hard disk drive
Secondary Storage	USB hard disk drive or flash drive

GENERAL	
Dimensions (W x H x D)	10.4" x 2.0" x 7.5" (265mm x 52mm x 191mm)
Unit Weight	3.7 lbs. (1.7kg)
Shipping Weight	7.3 lbs. (3.3kg)
Shipping Dimensions (W x H x D)	14.0" x 4.1" x 13.4" (355mm x 103mm x 340mm)
Operating Temperature	41°F to 104°F (5°C to 40°C)
Operating Humidity	0% to 90%
Power	12V  1.0A (Adaptor: 100-240 V~, 50/60Hz, 1.0A, 12V  3A)
Power Consumption	Max. 25W
Approvals	FCC, CE, UL *

* CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions. This equipment is indoor use and all the communication wiring are limited to inside of the building.

Specifications are subject to change without notice.